

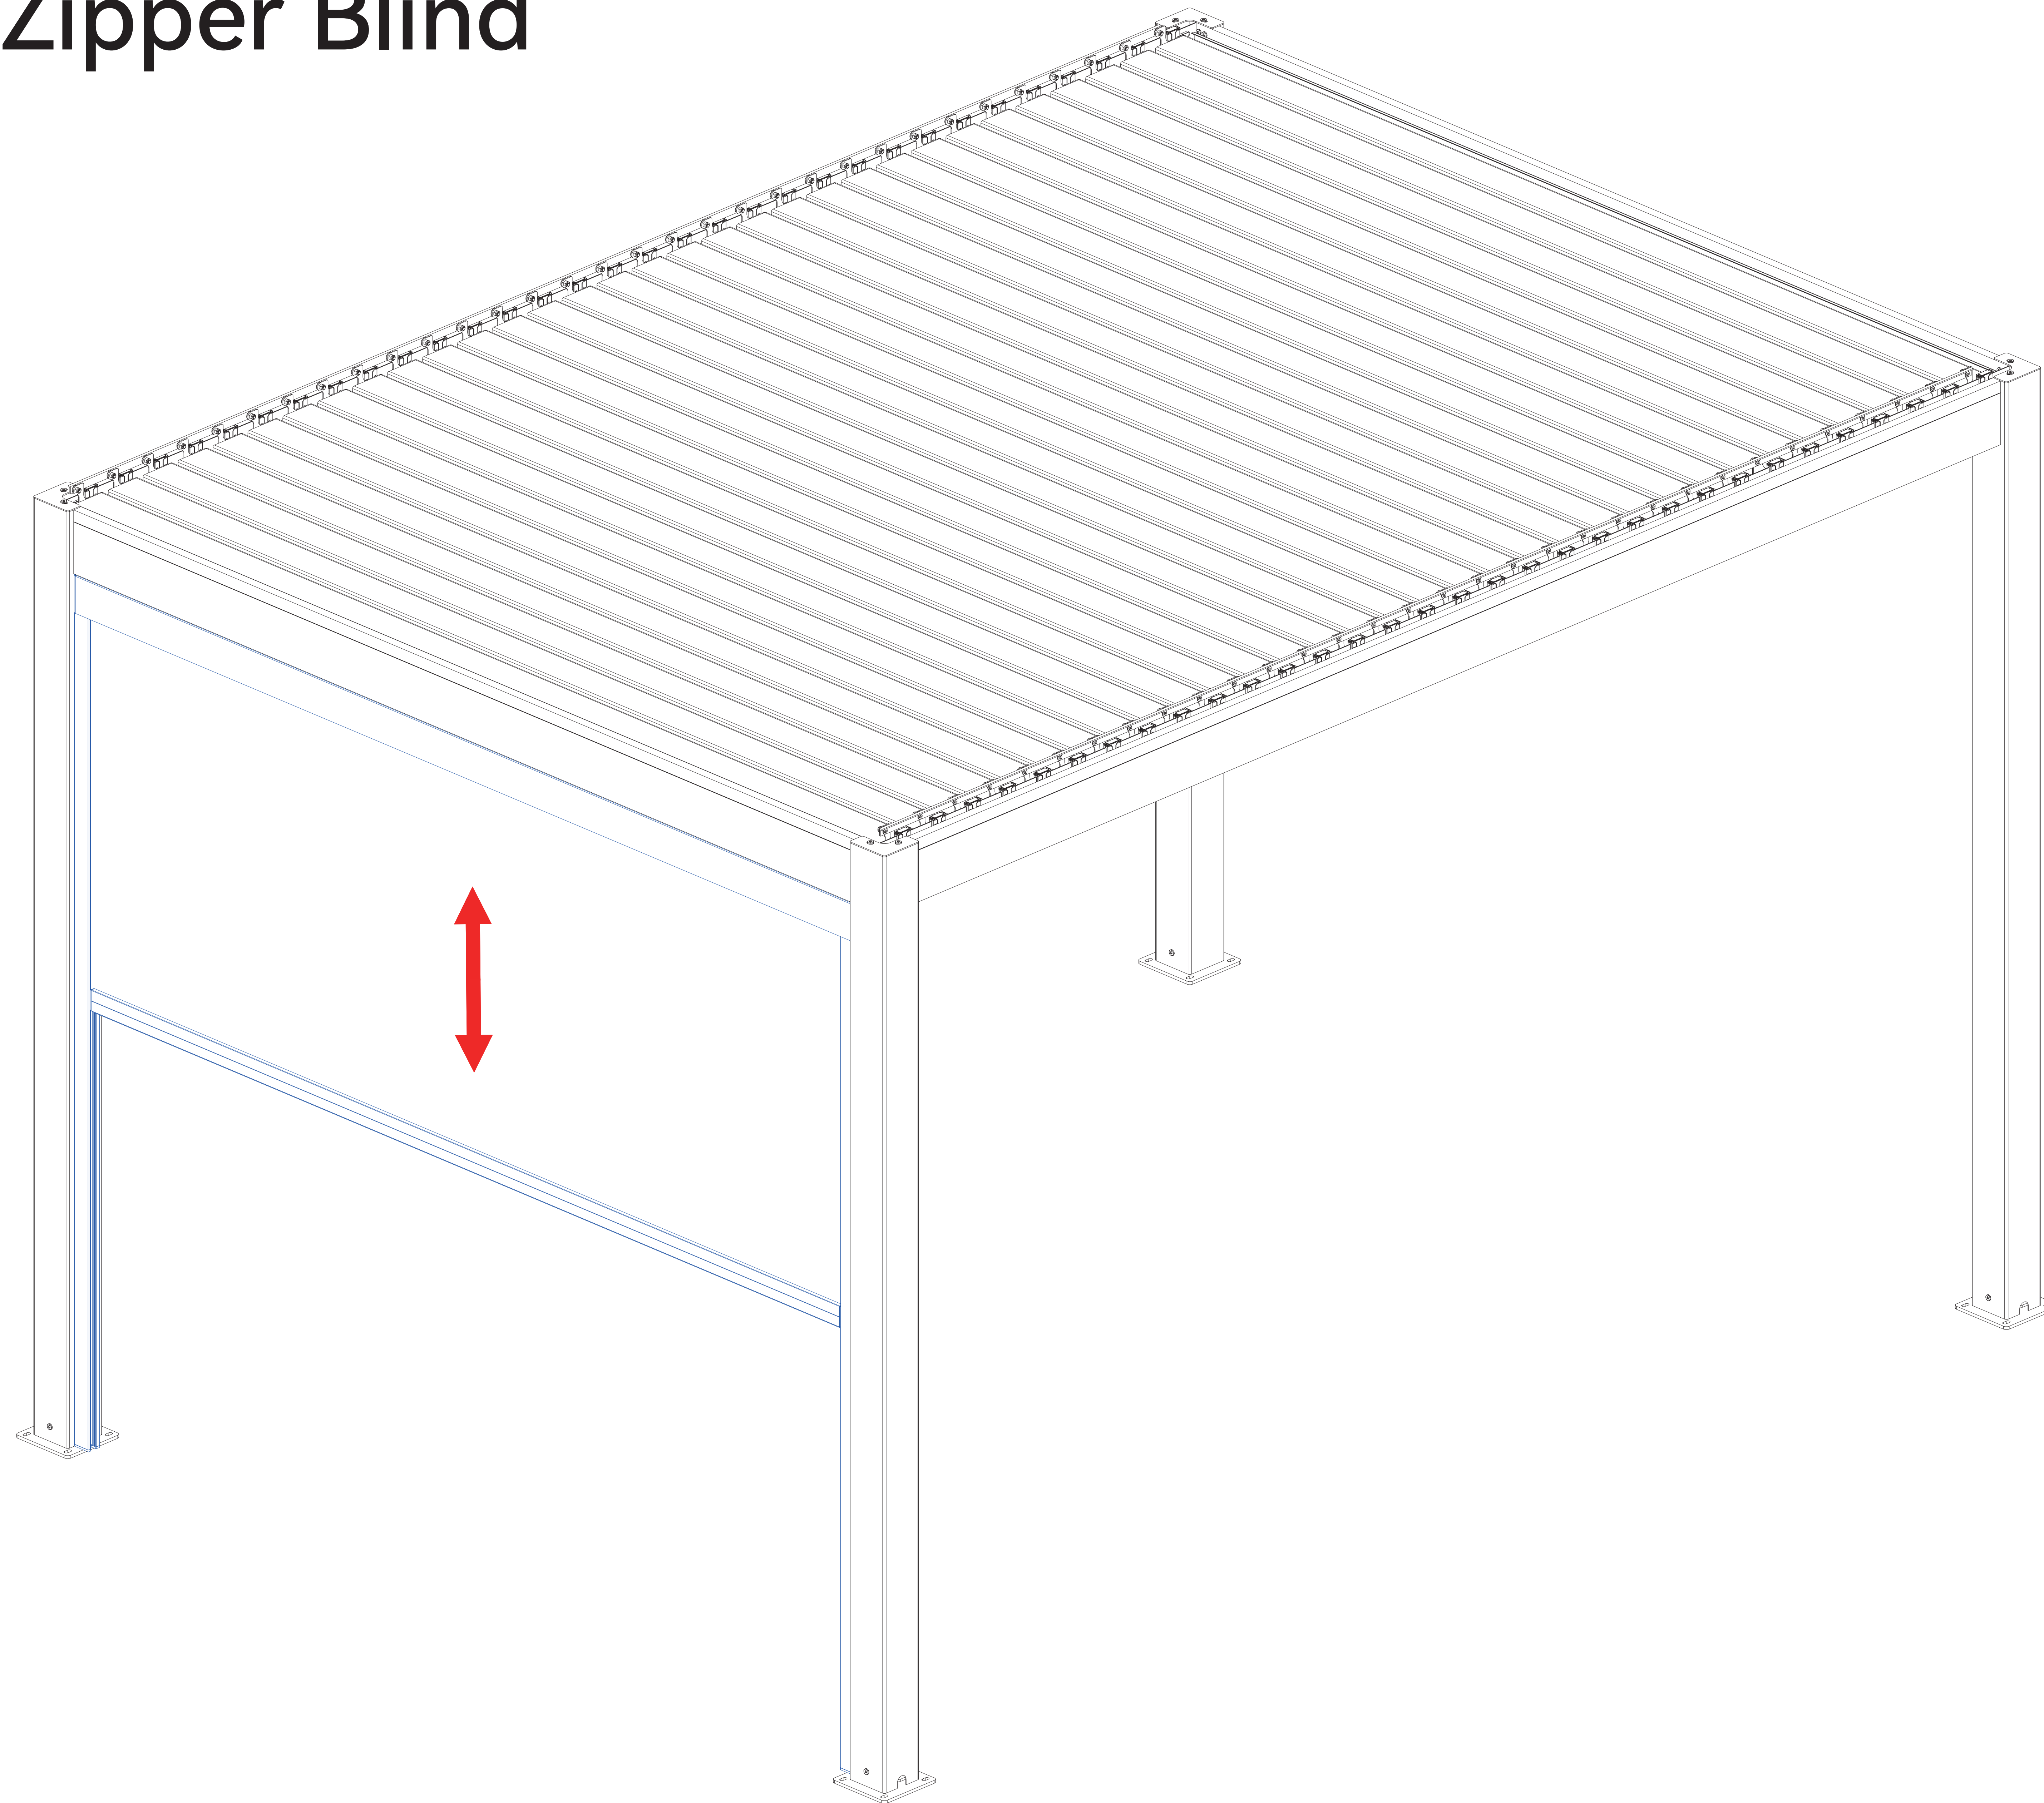
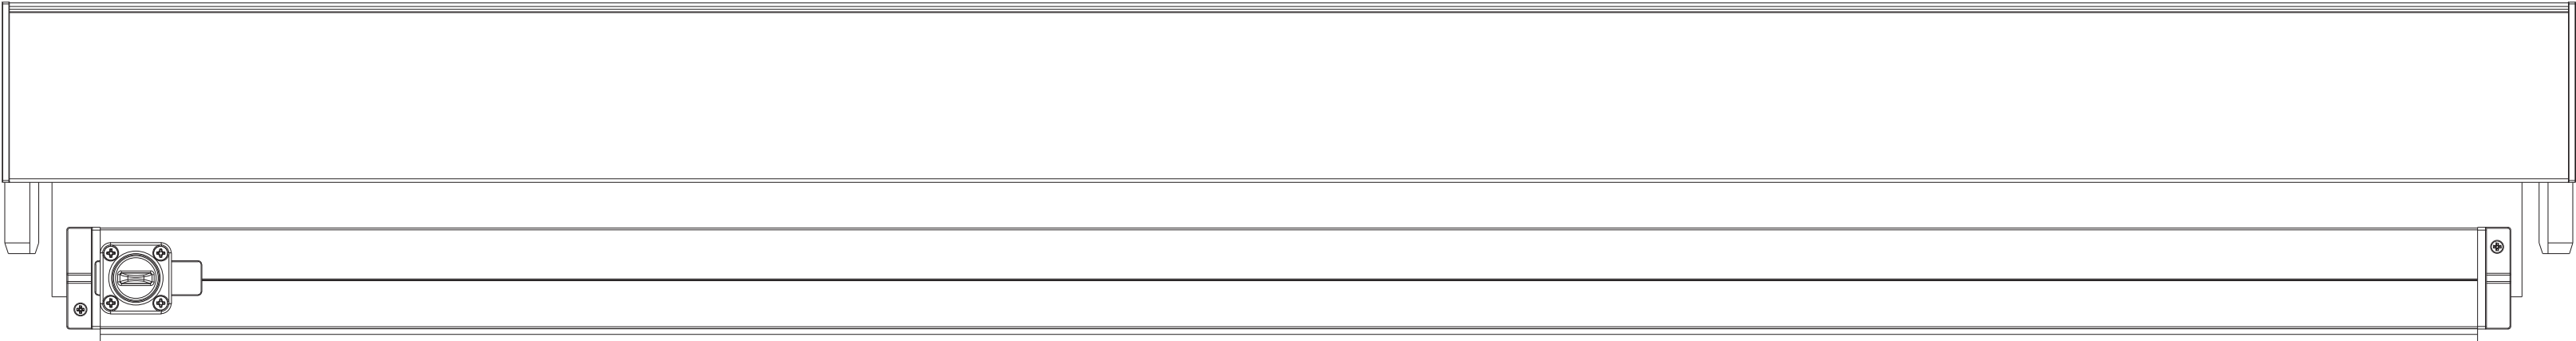
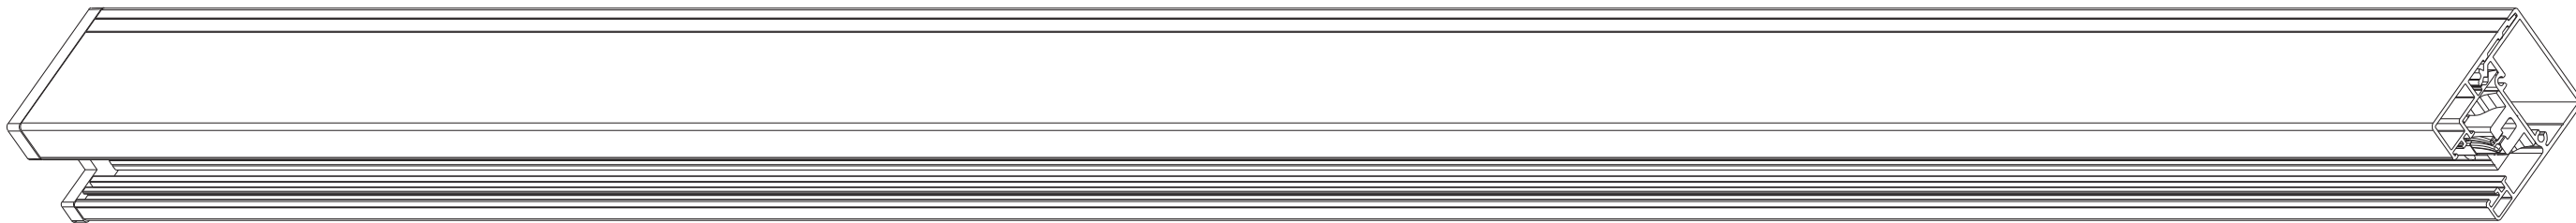


# Manual Zipper Blind

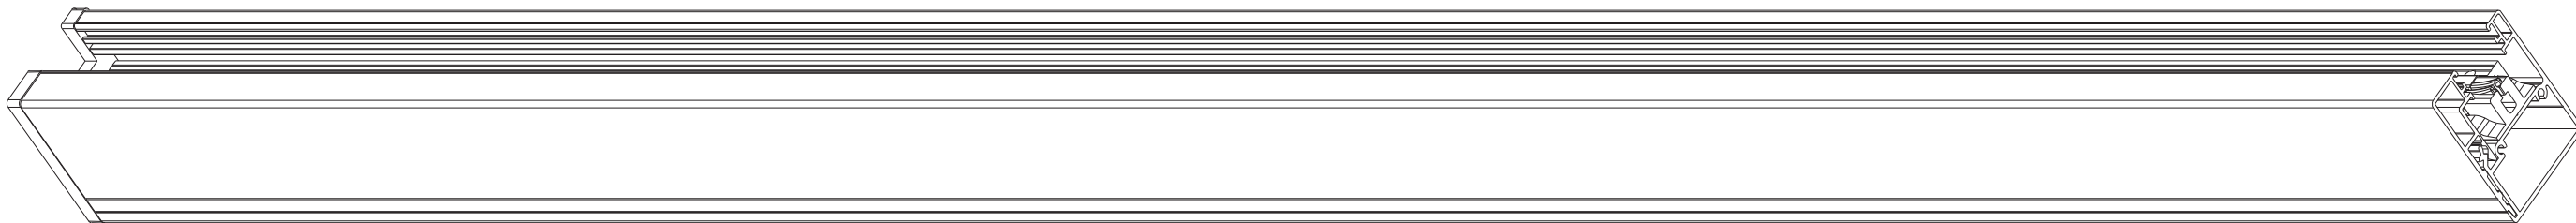


Part list

Product Name	Picture	Quantity
Main frame		1
Side rail A		1
Side rail B		1
ST4.2x32 screws		8

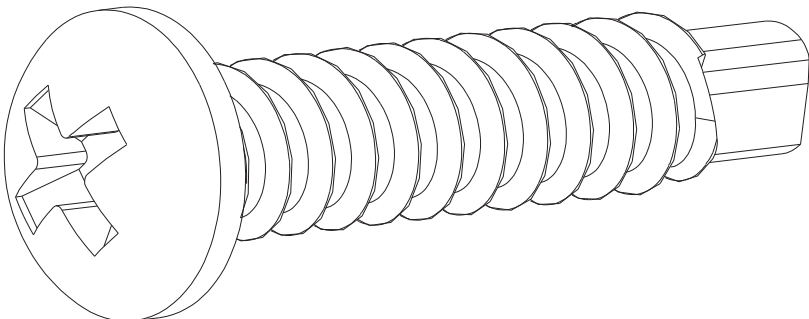


# 1. Ensure that the body fabric curtain is centered

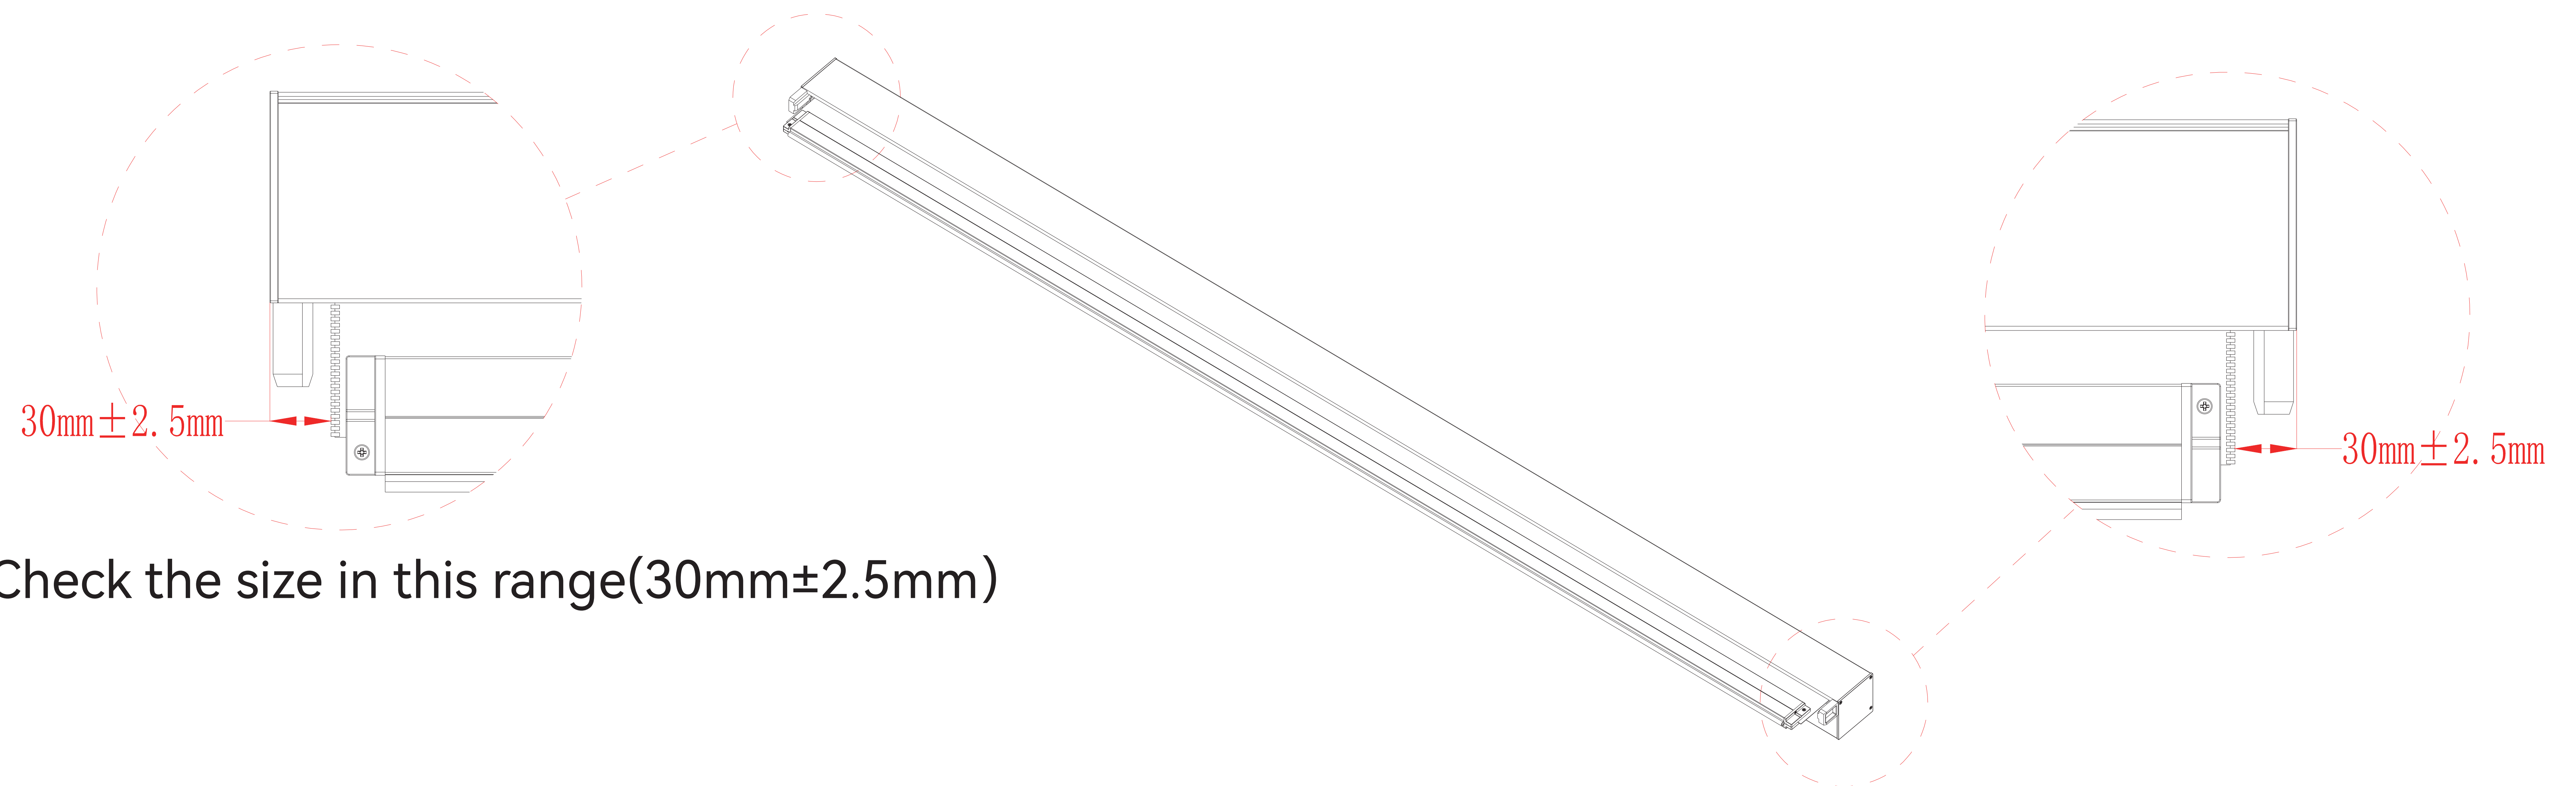


Check the size in this range(30mm $\pm$ 2.5mm)

If one side does not meet the size standard (30 mm), pull out the fabric curtain completely and adjust the fabric to the side so that it is centered.


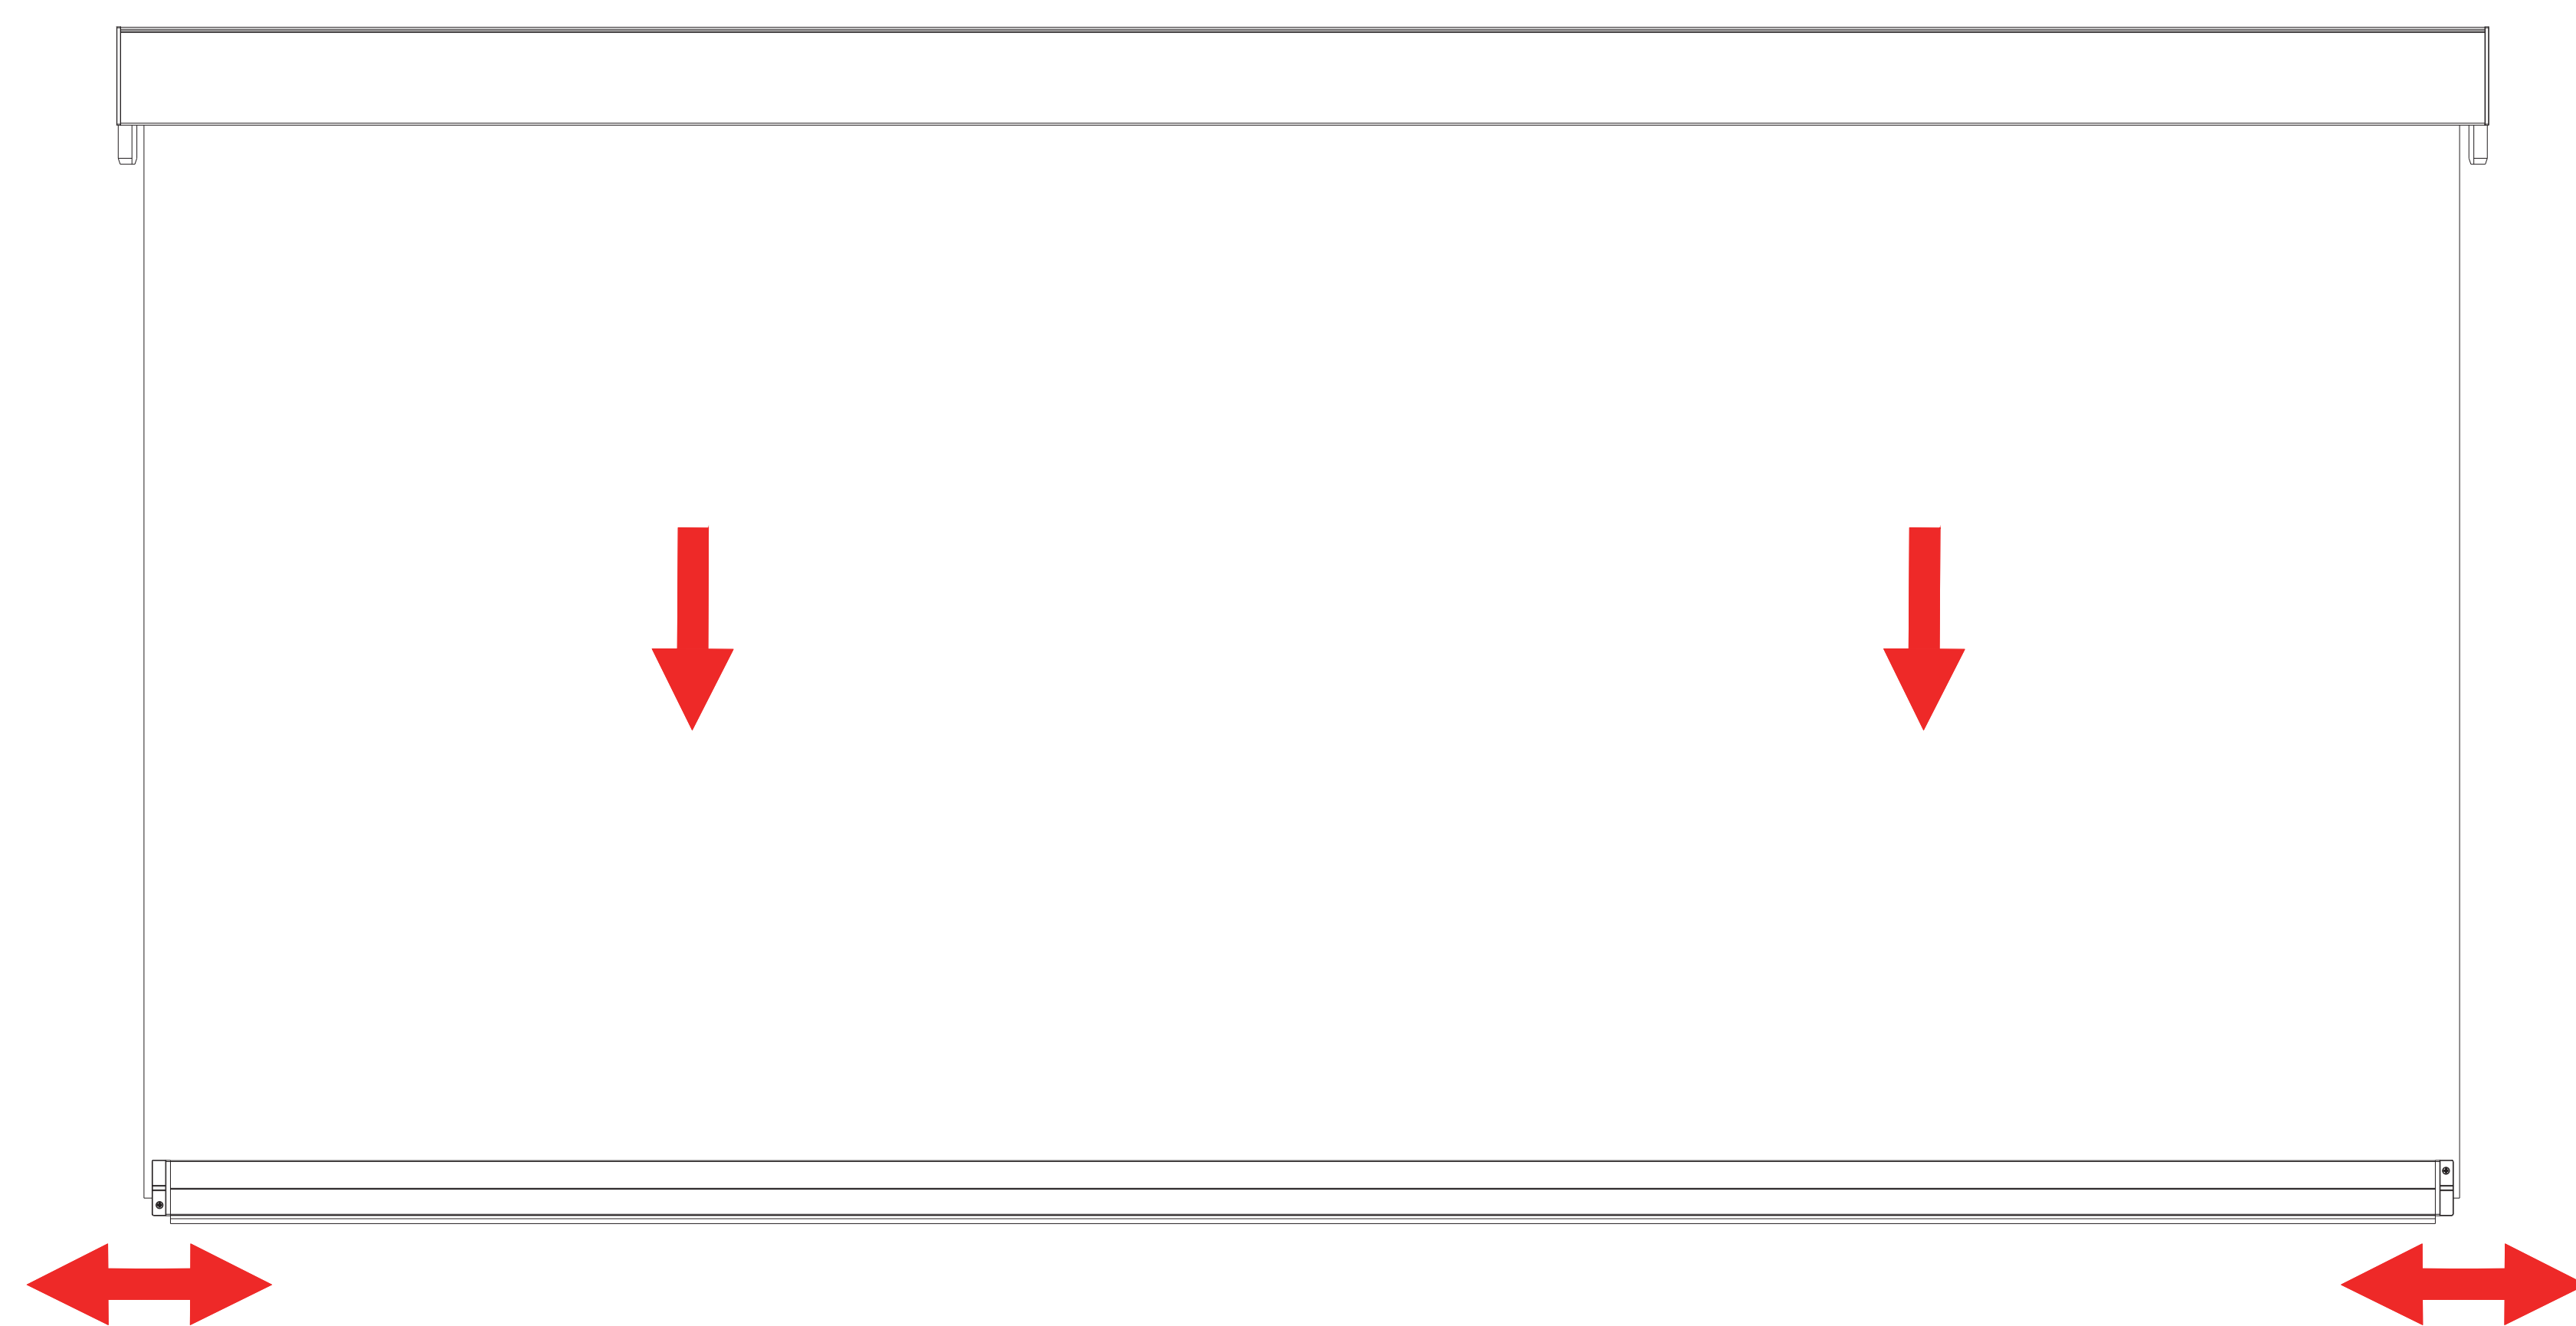


Left and right adjustment








Repeat to check whether the size is within the size.


## 2. Disassemble the side rail assembly

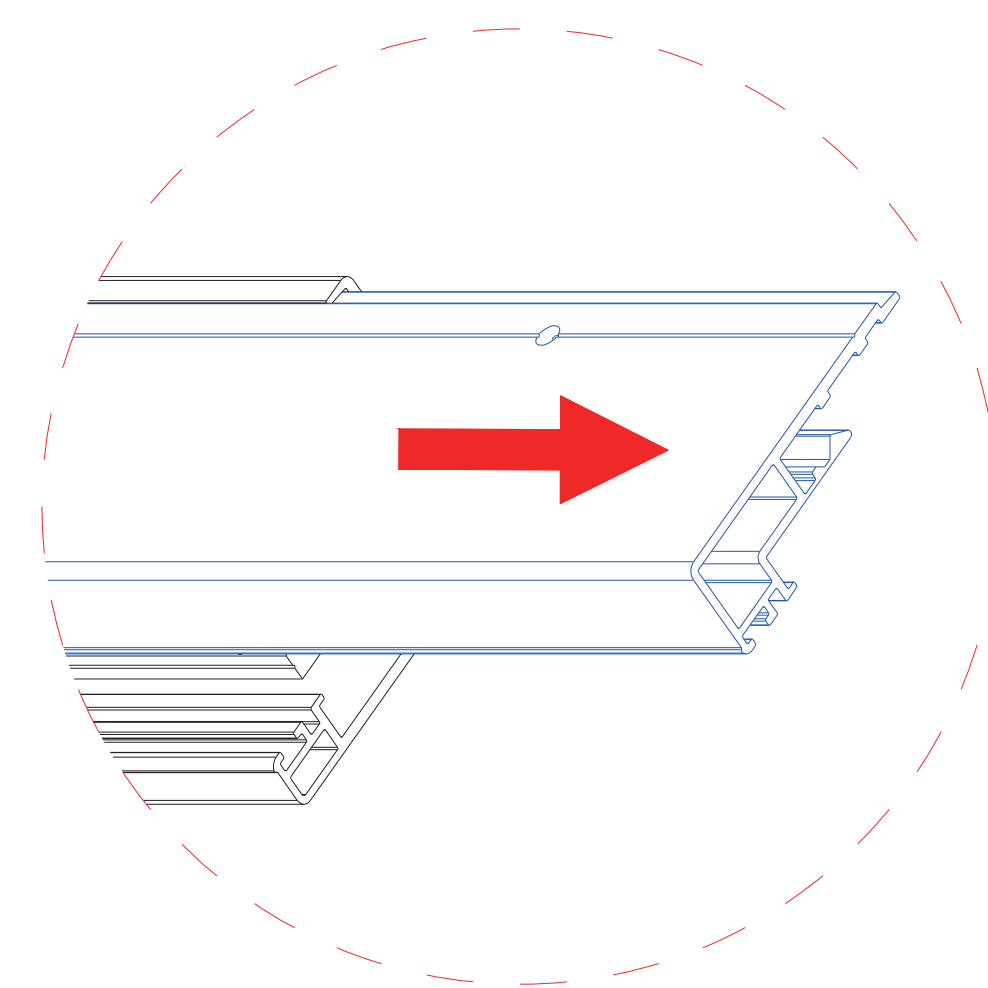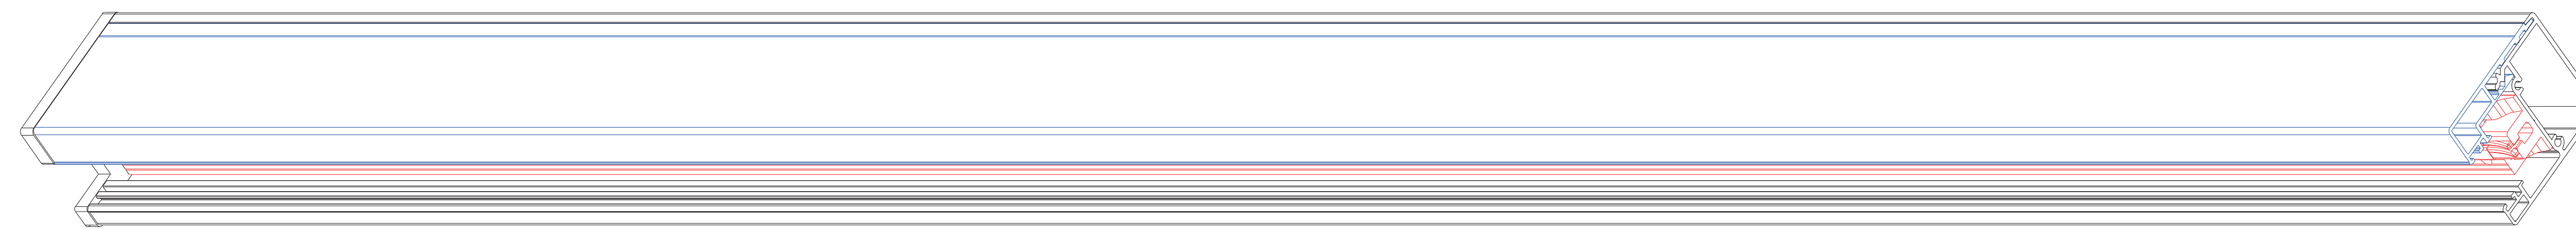


or

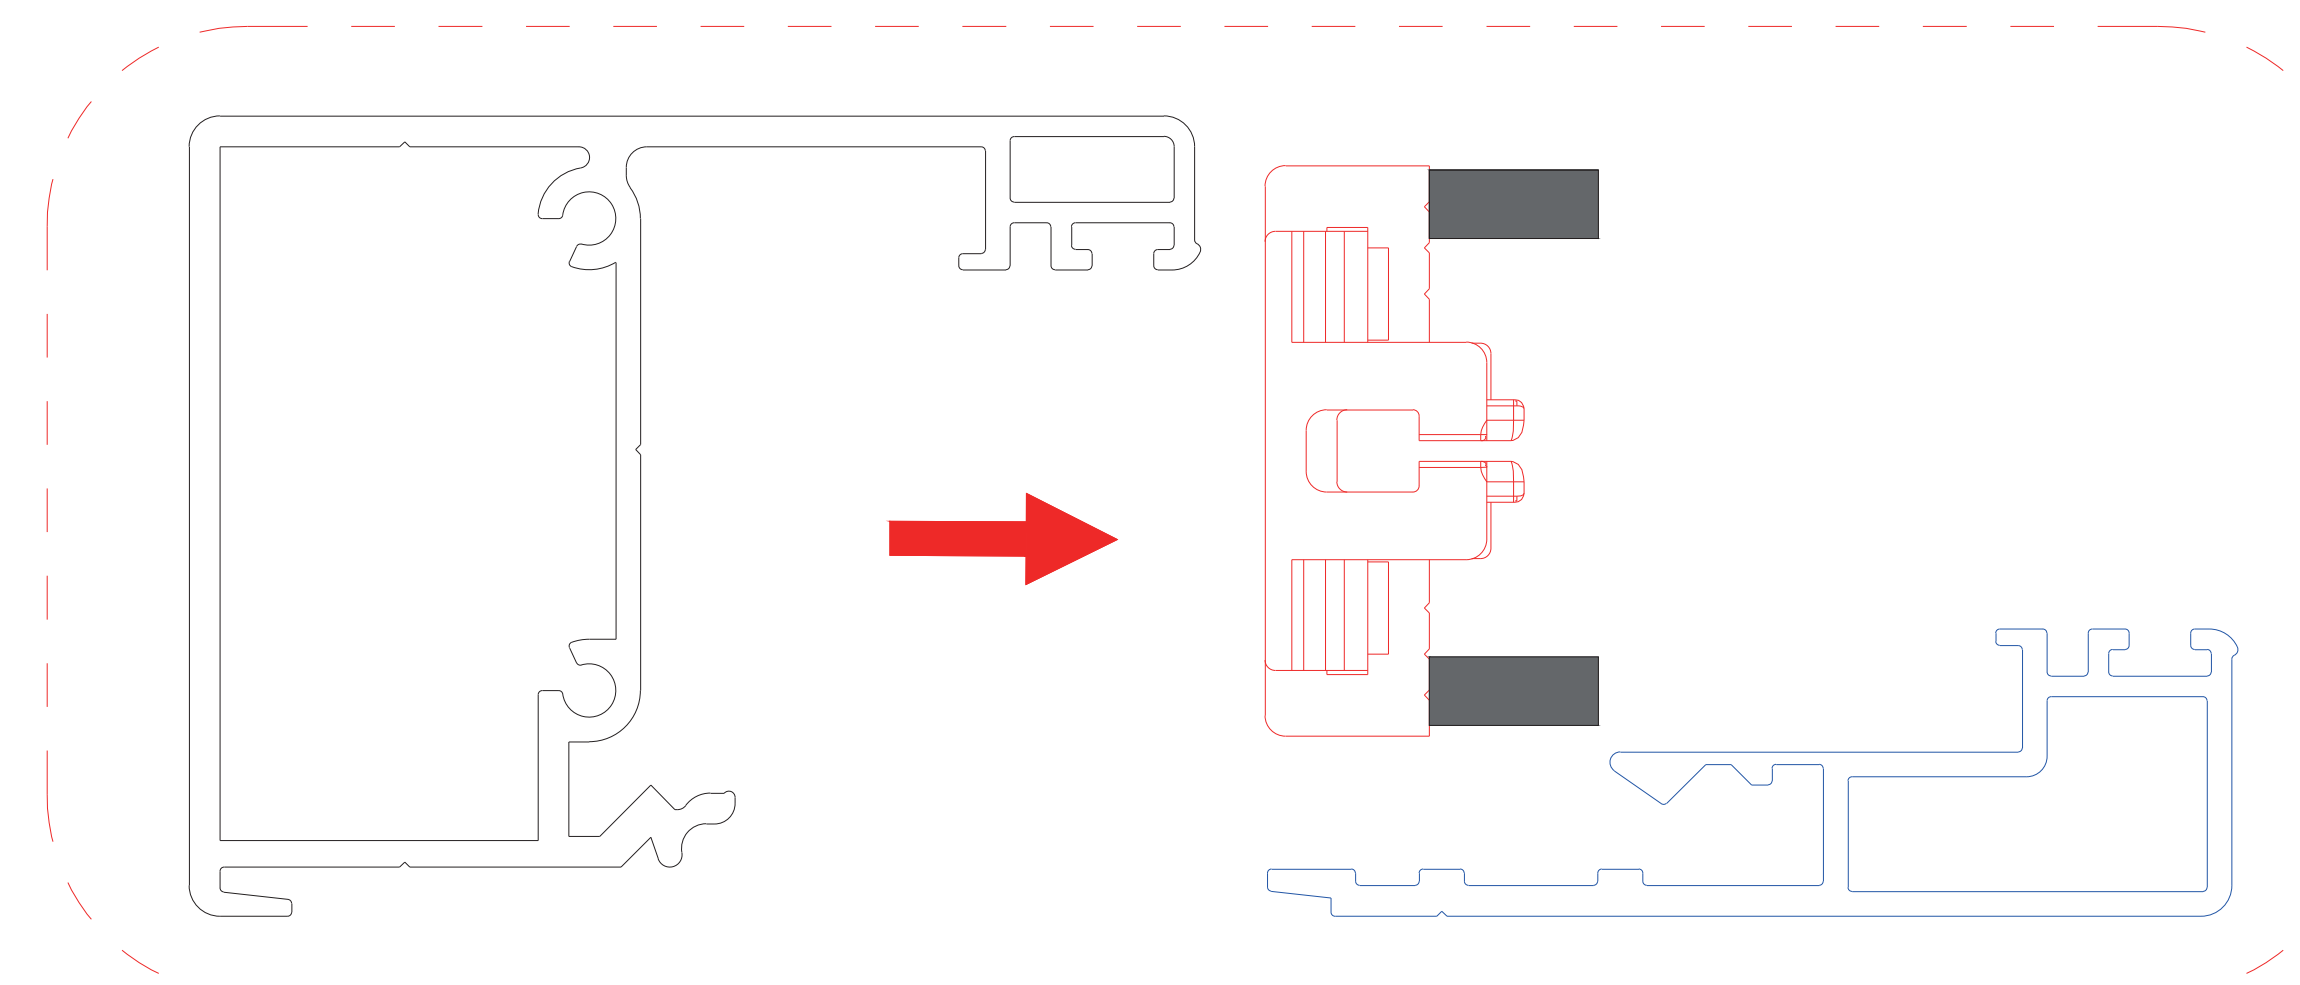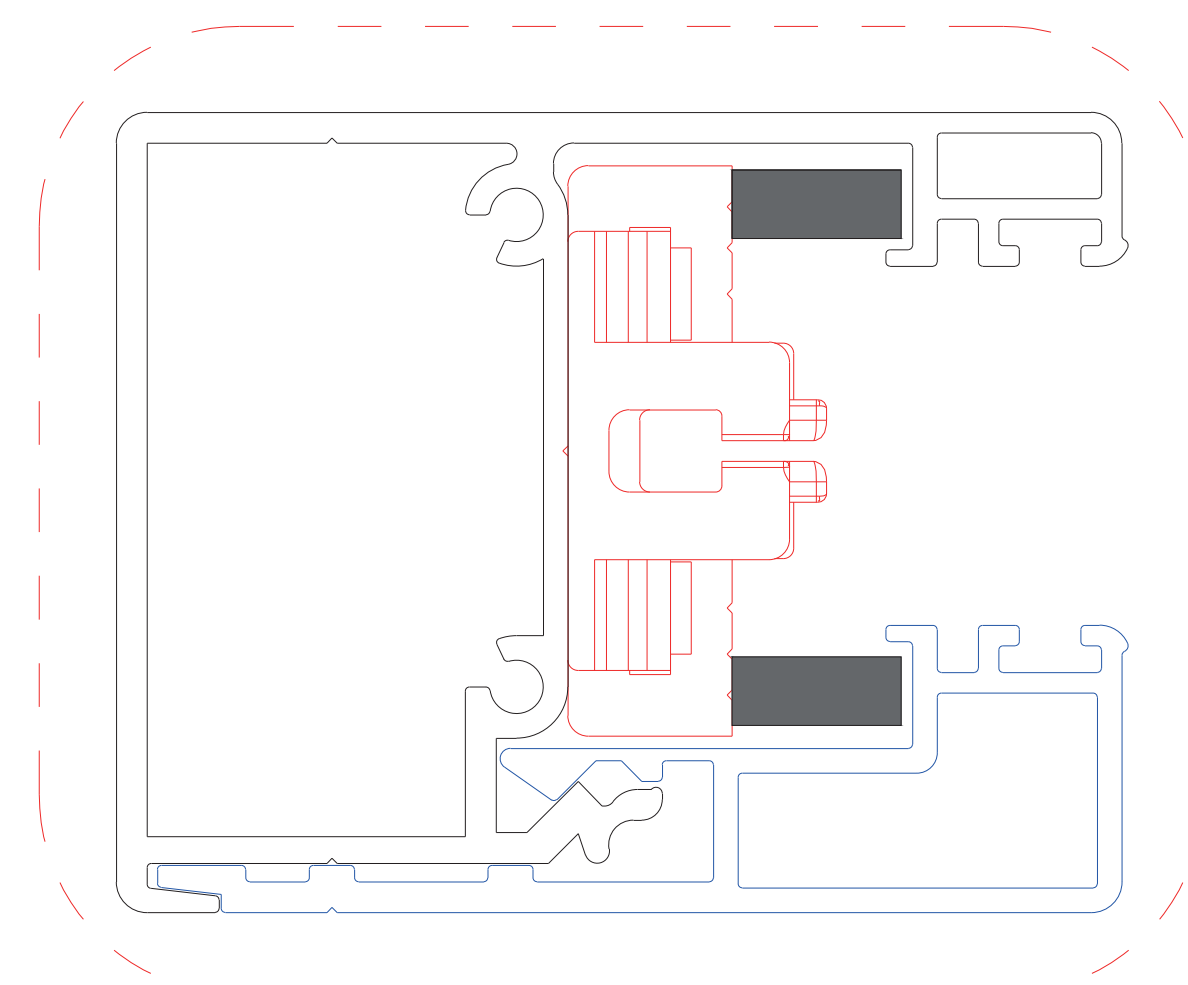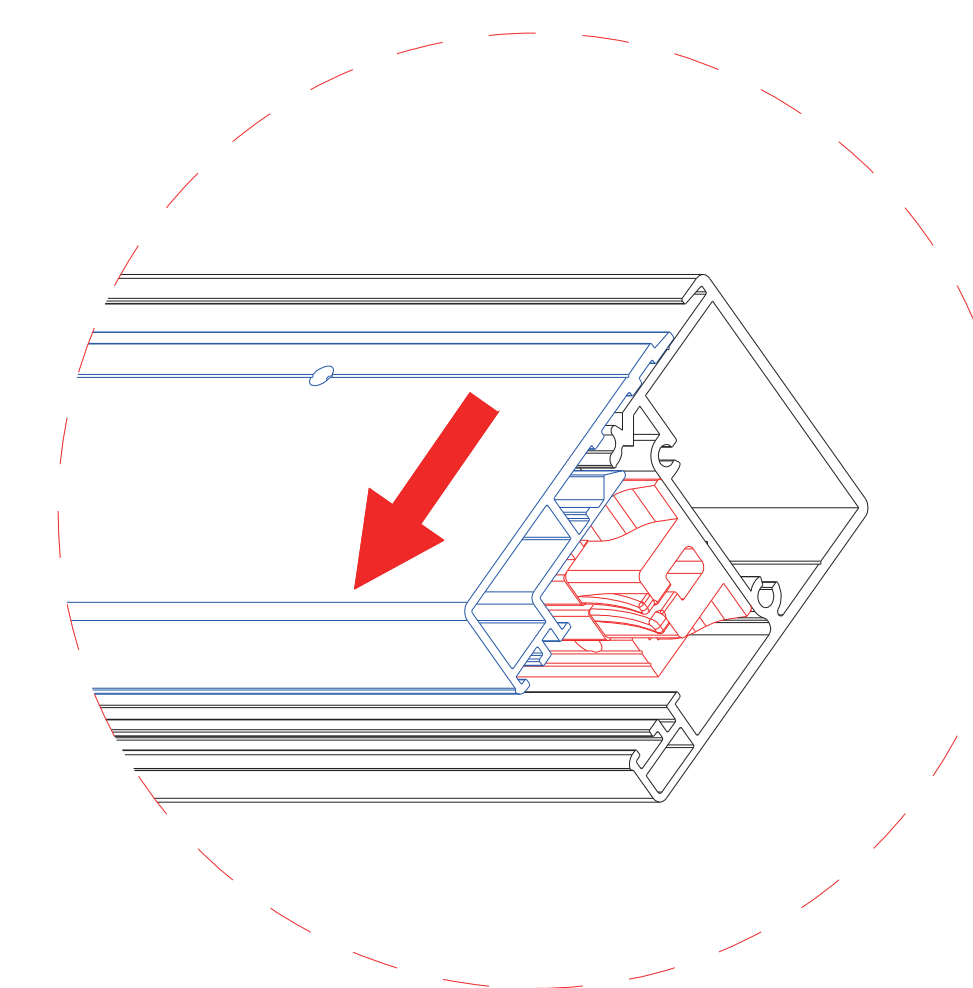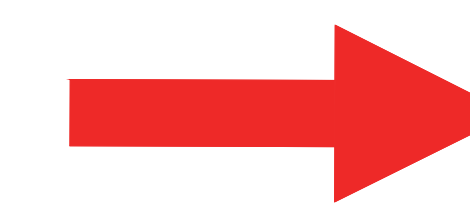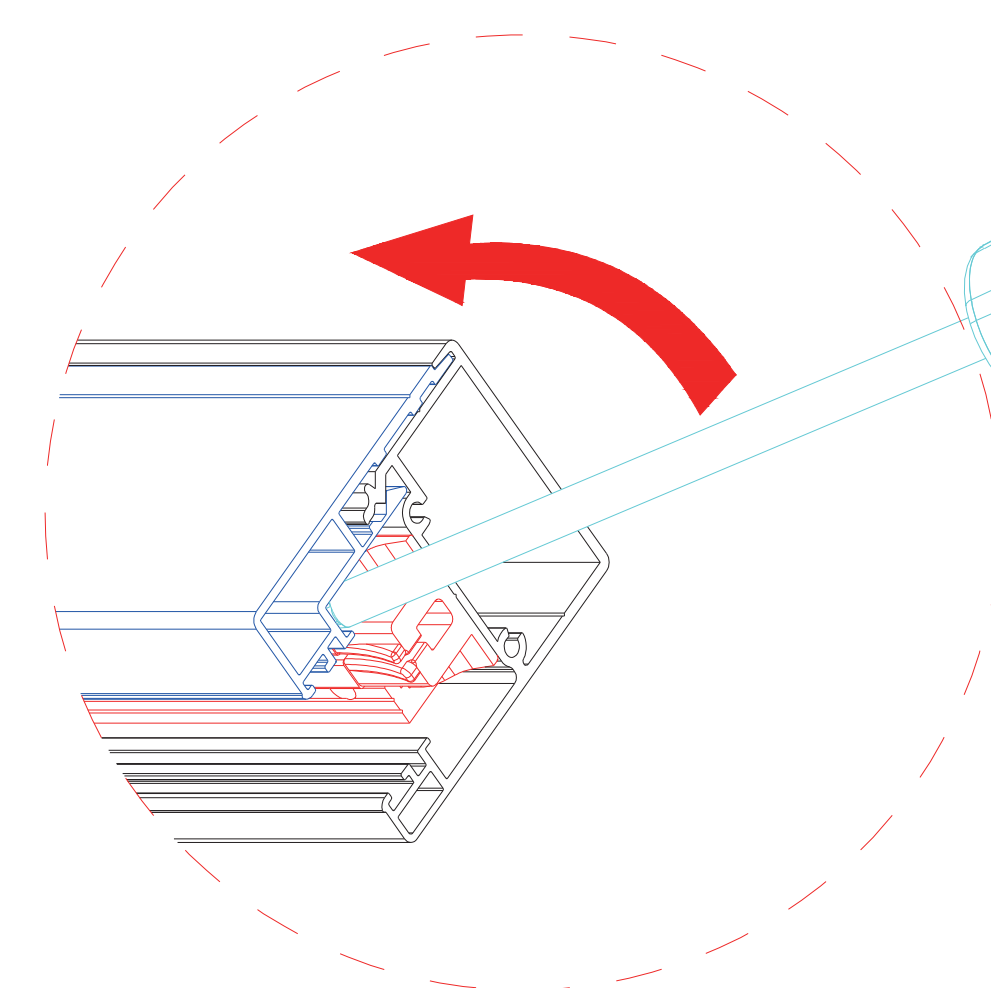

Remove the cover plate and inner track successively

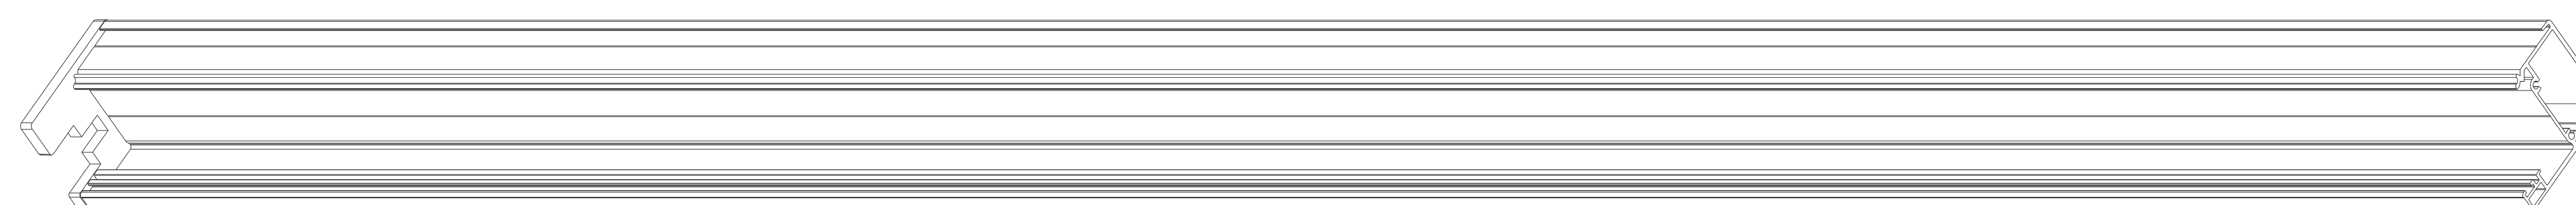

outside track

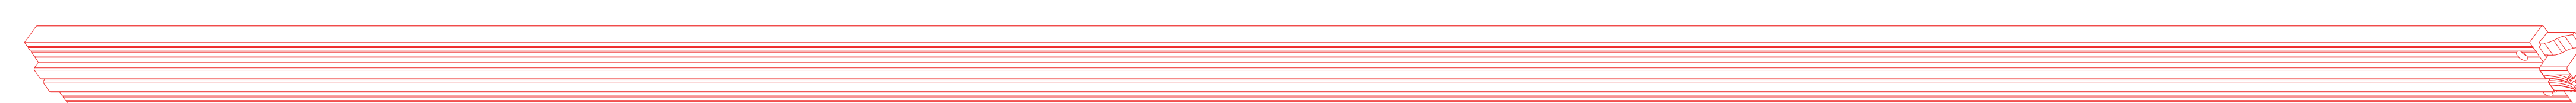


Plastic inner track





track cover

## 2. Drill the outer track.

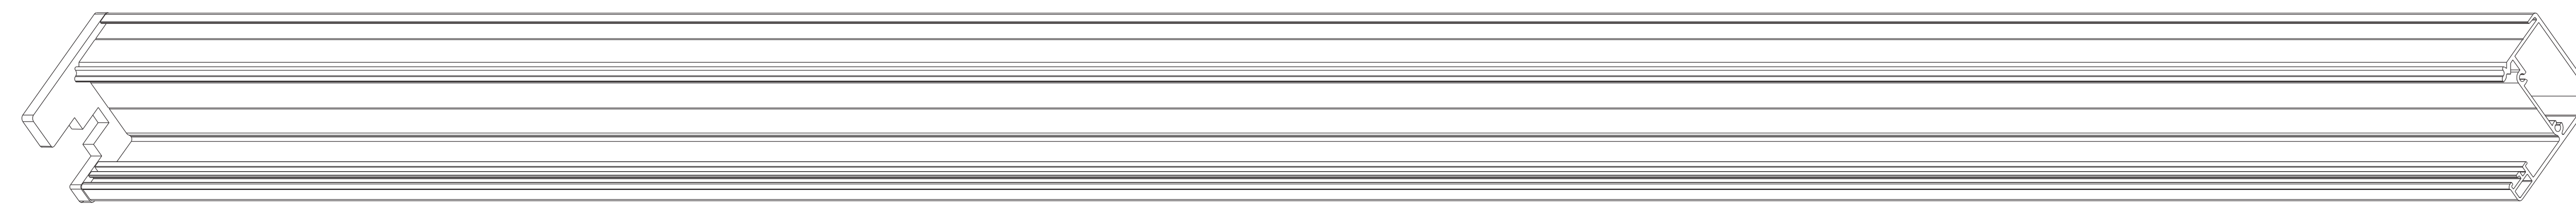


outer track

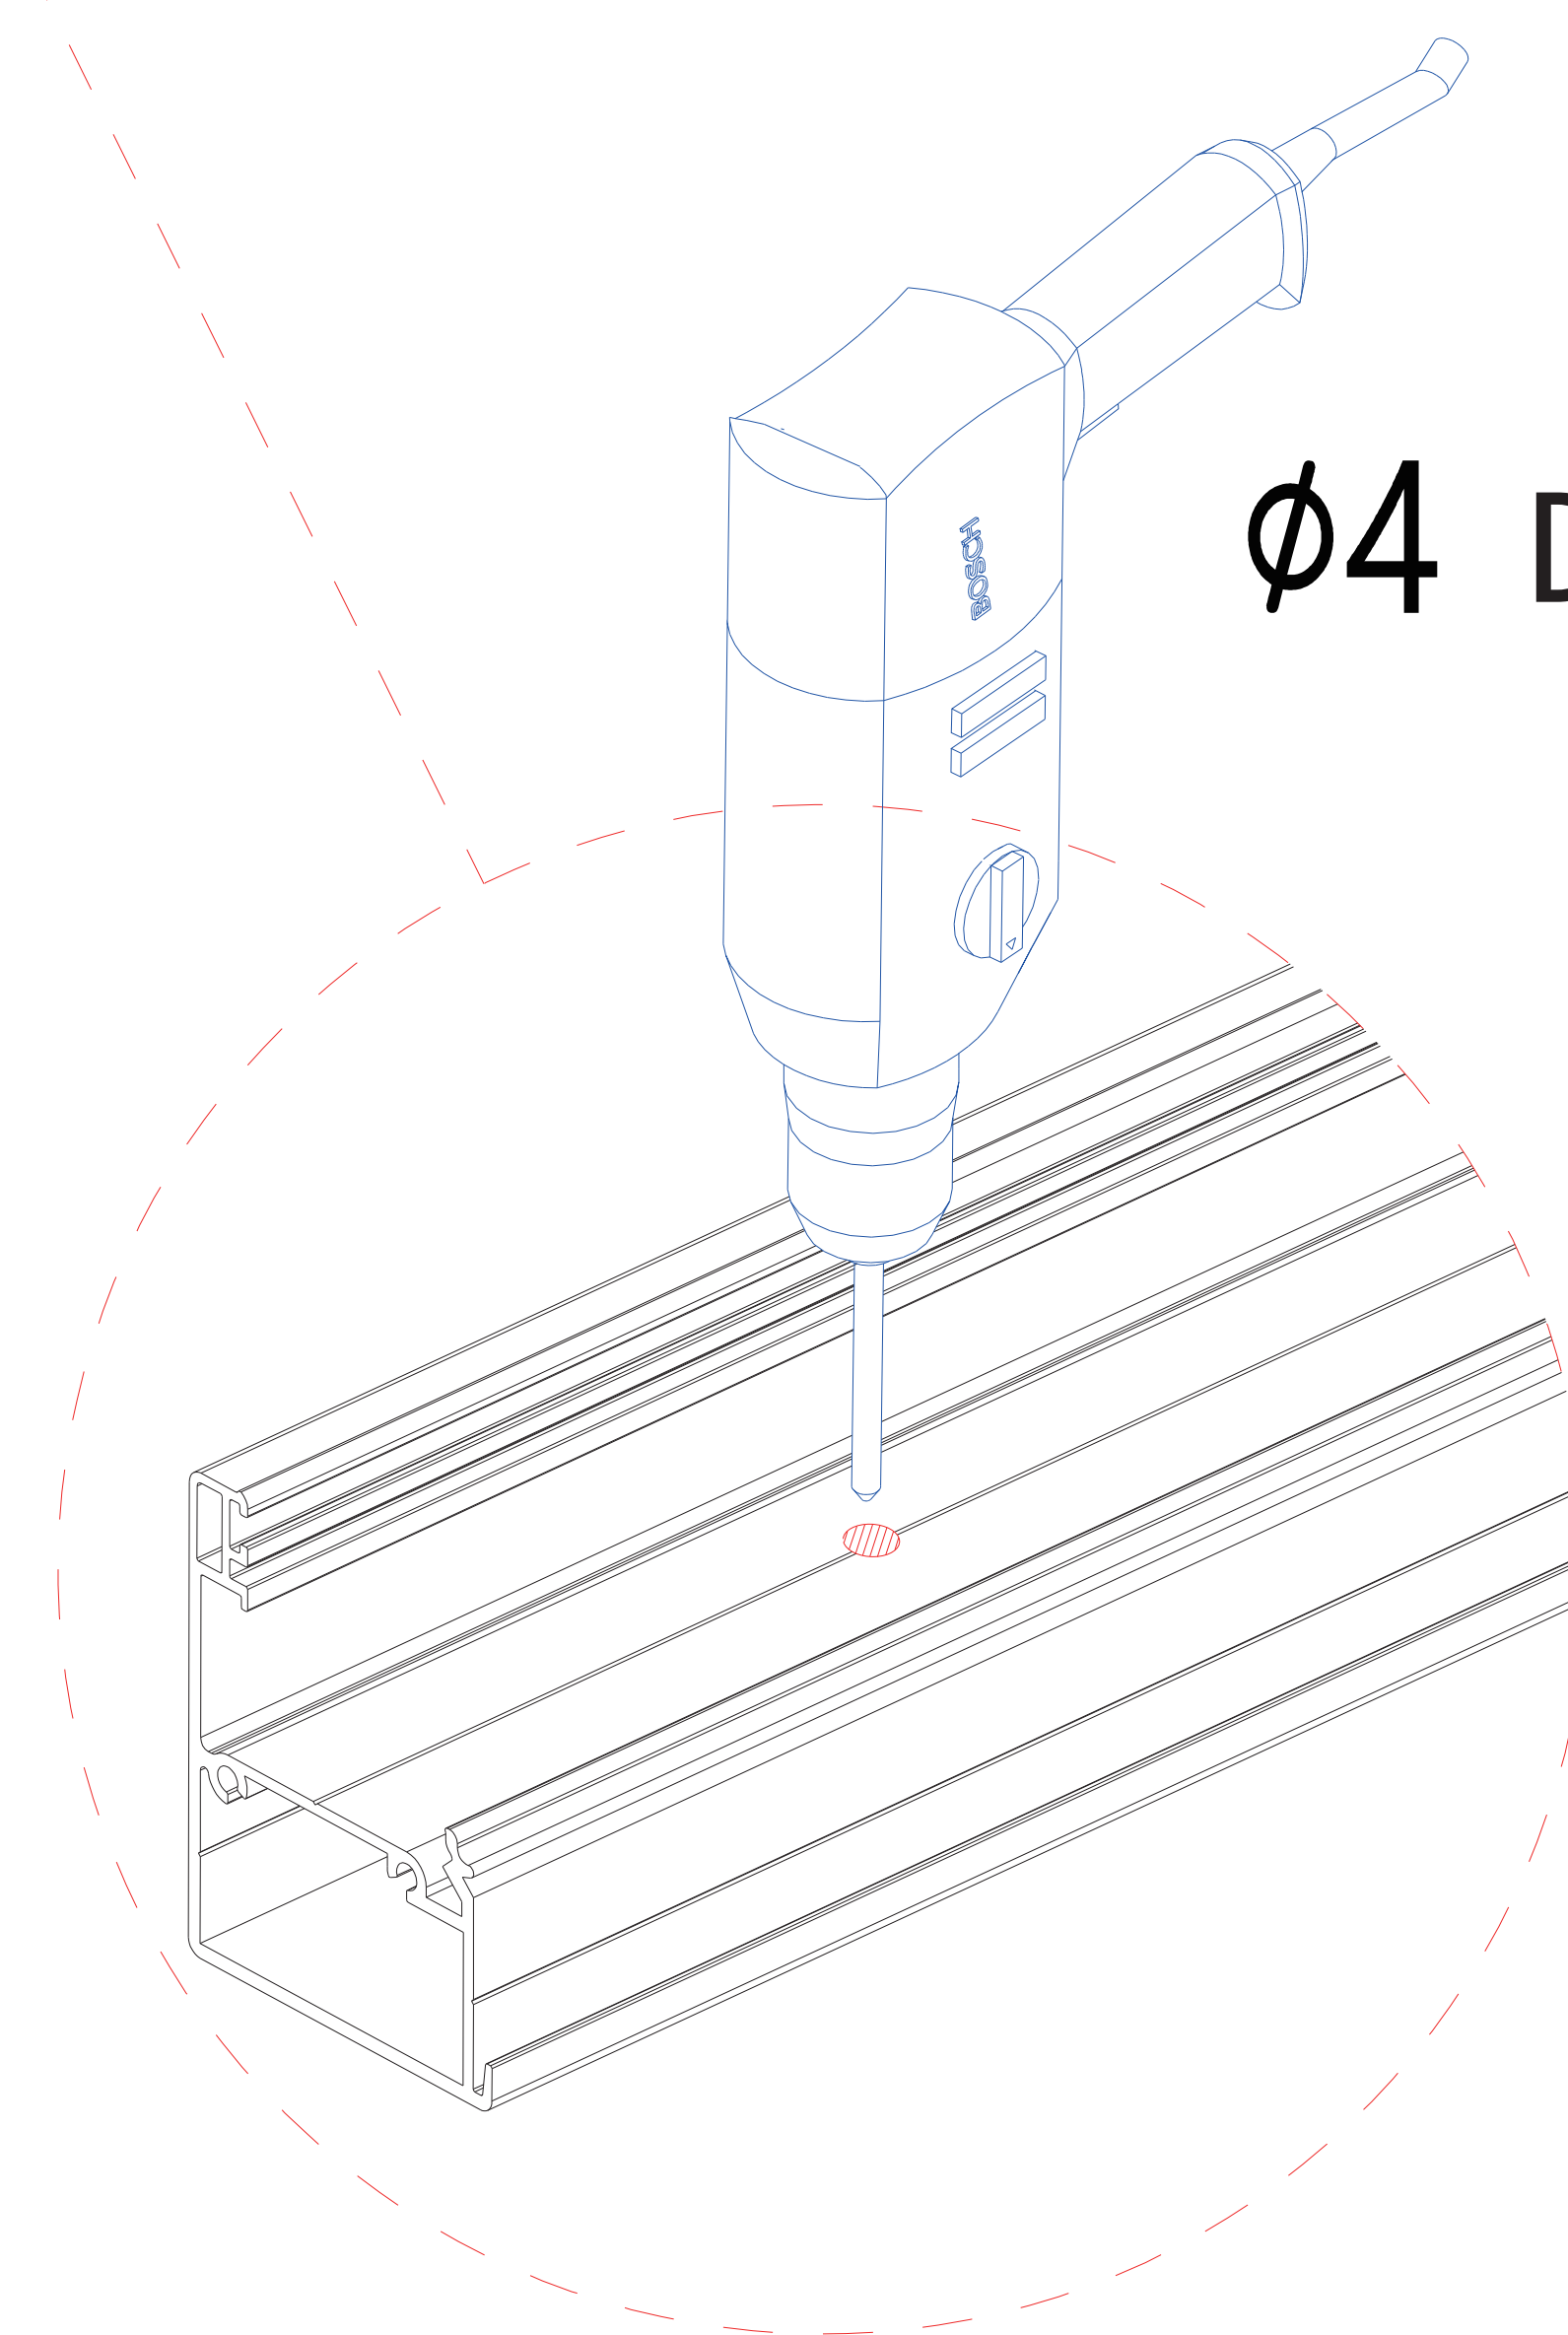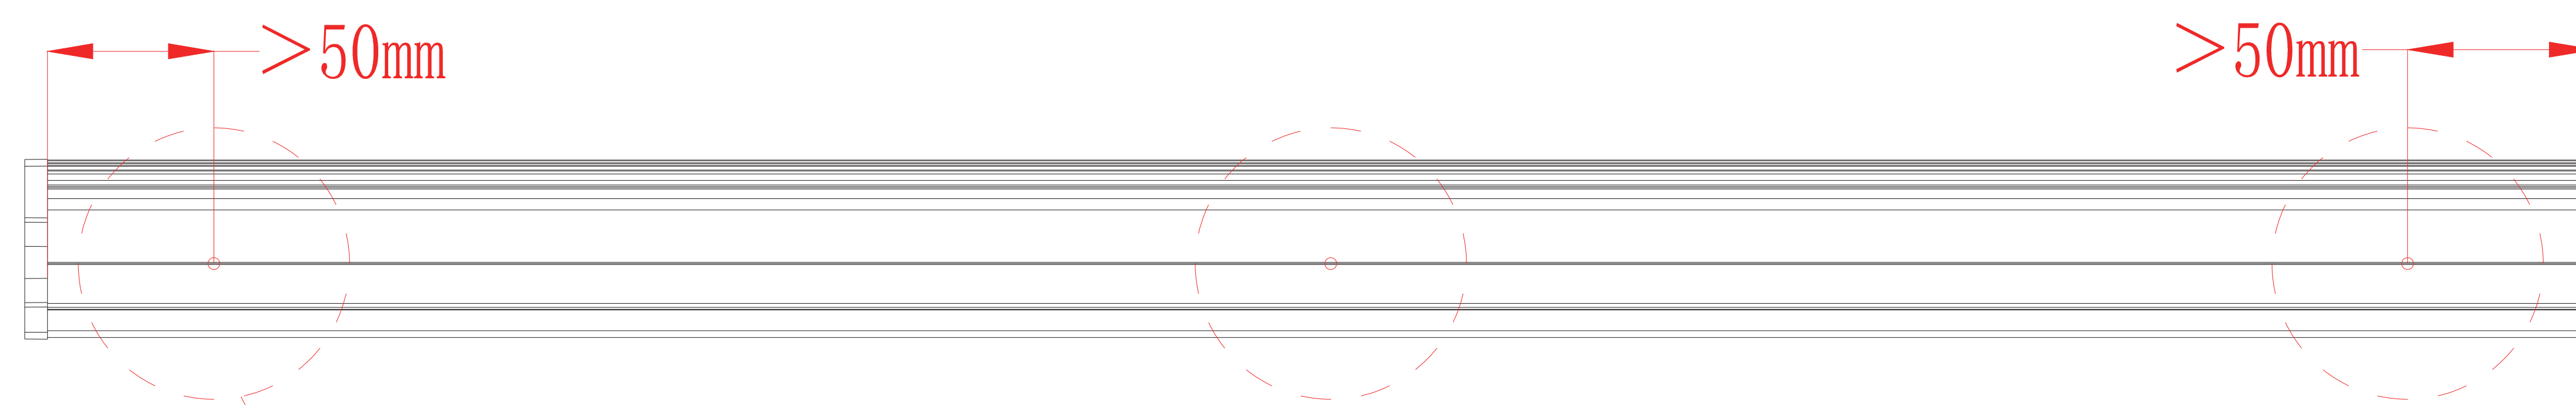


$\phi 4$  Drill bit

### 3.Install the outside track and main frame

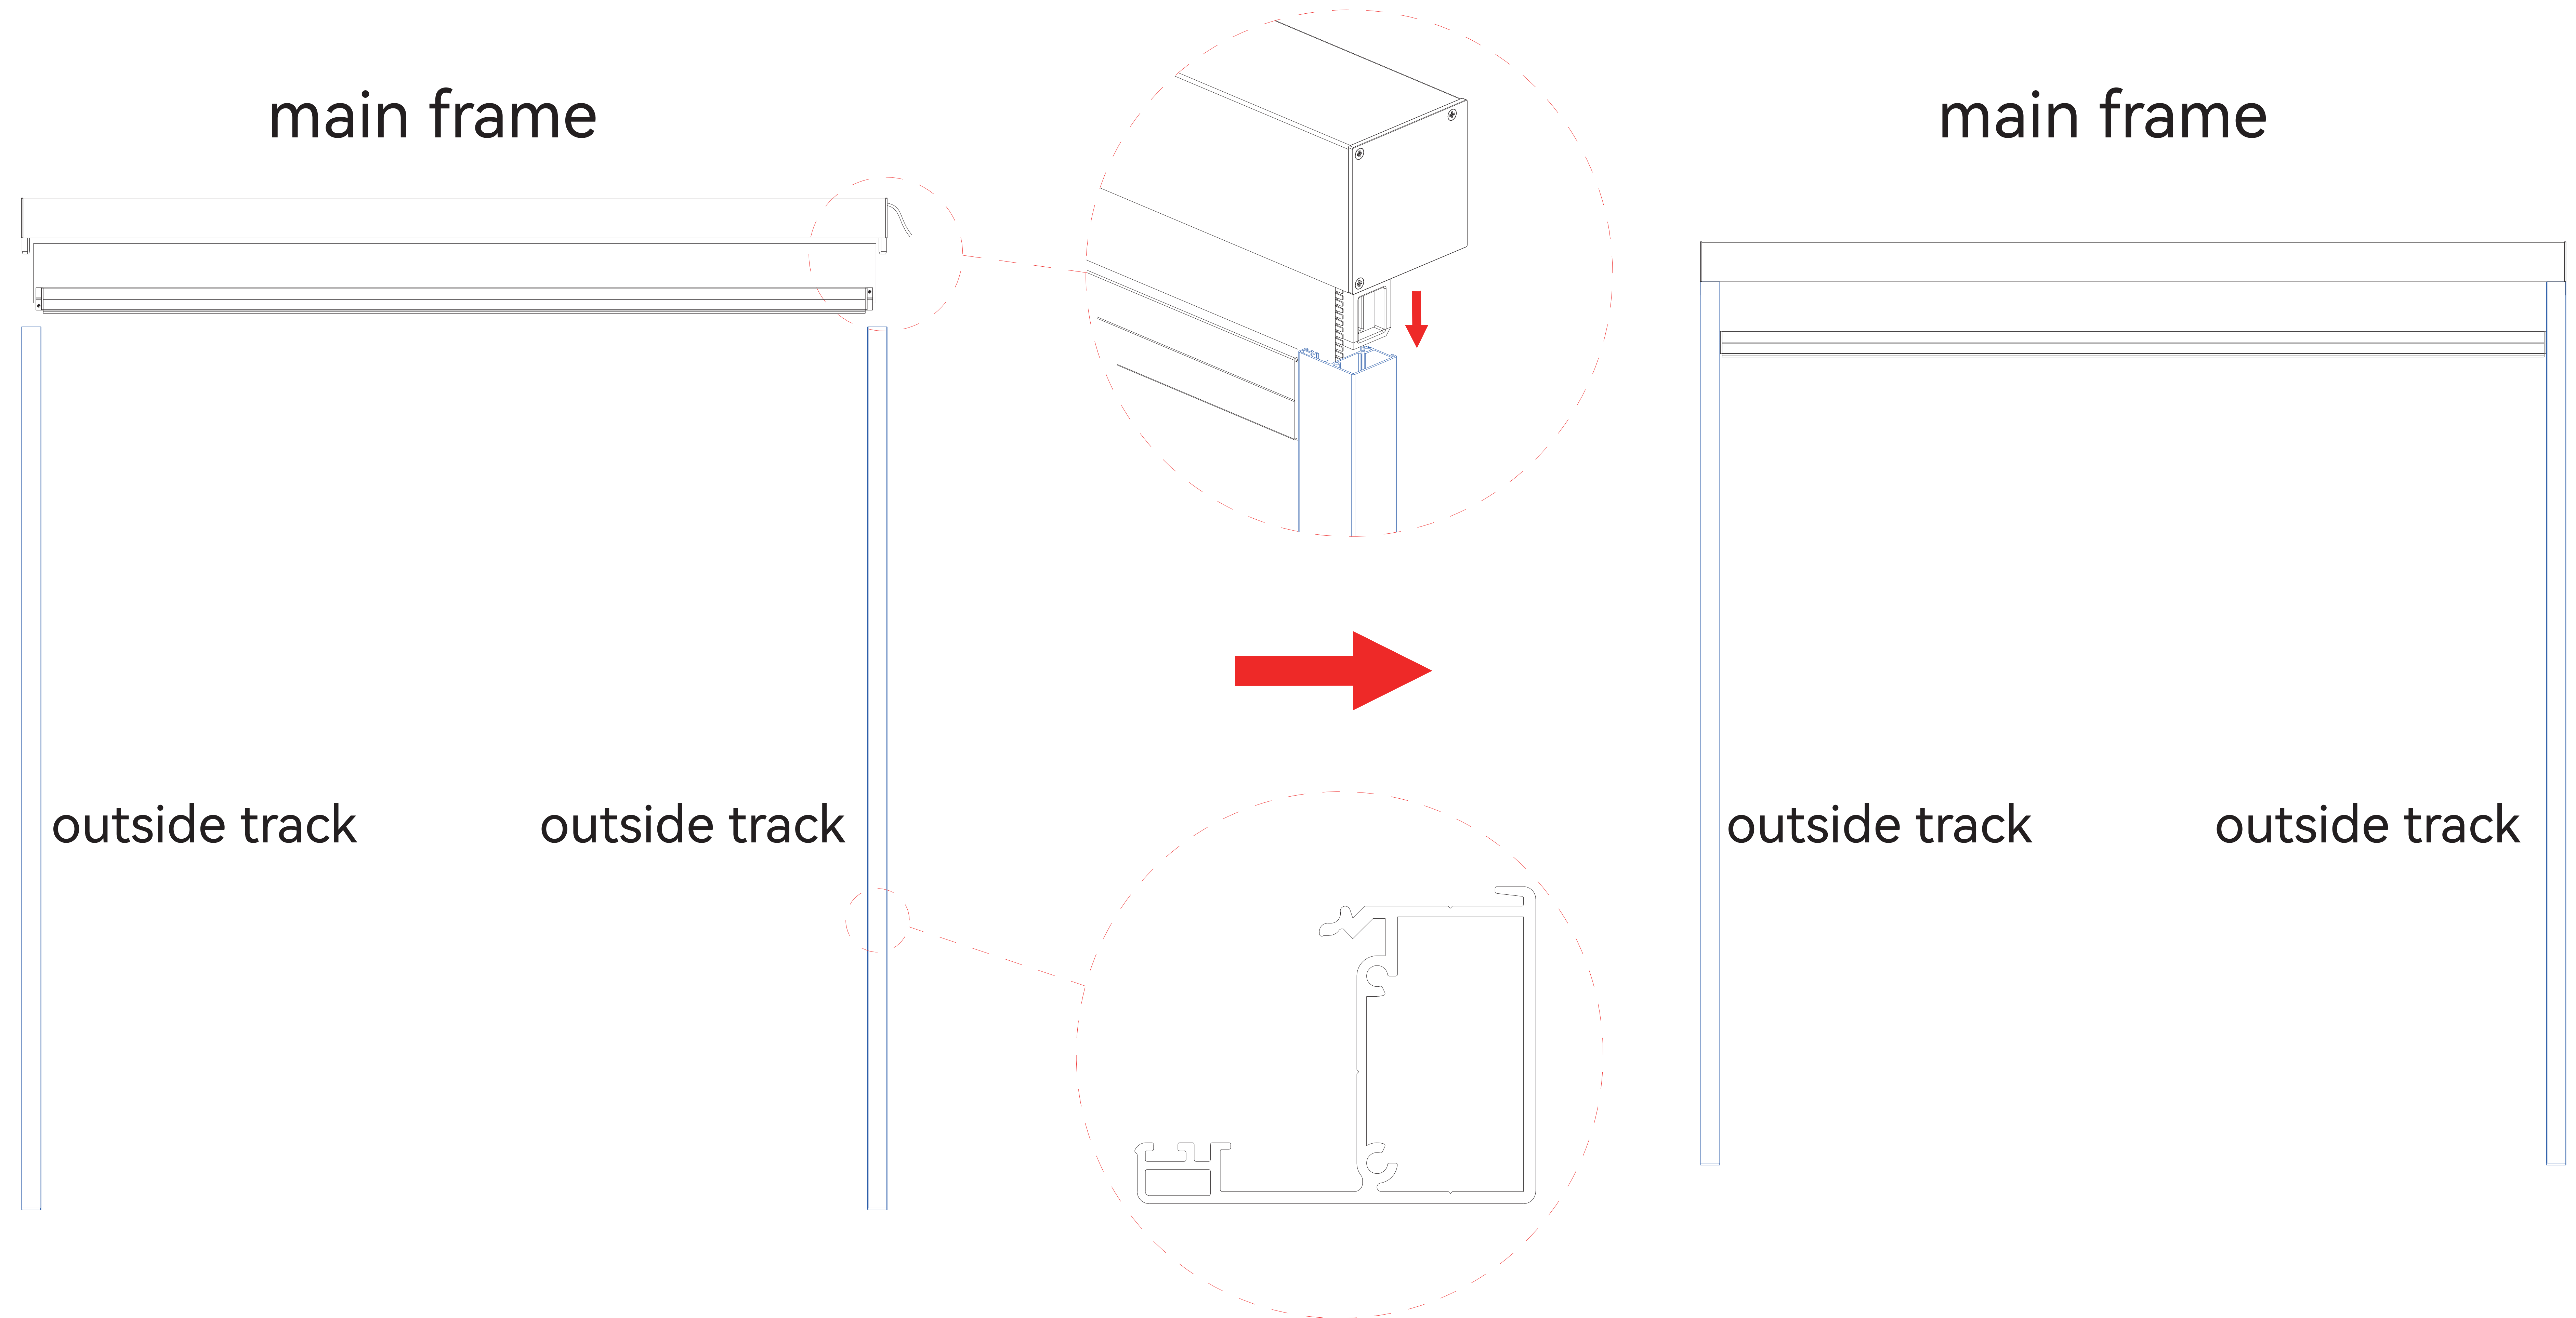




#### 4. Install the zip blind




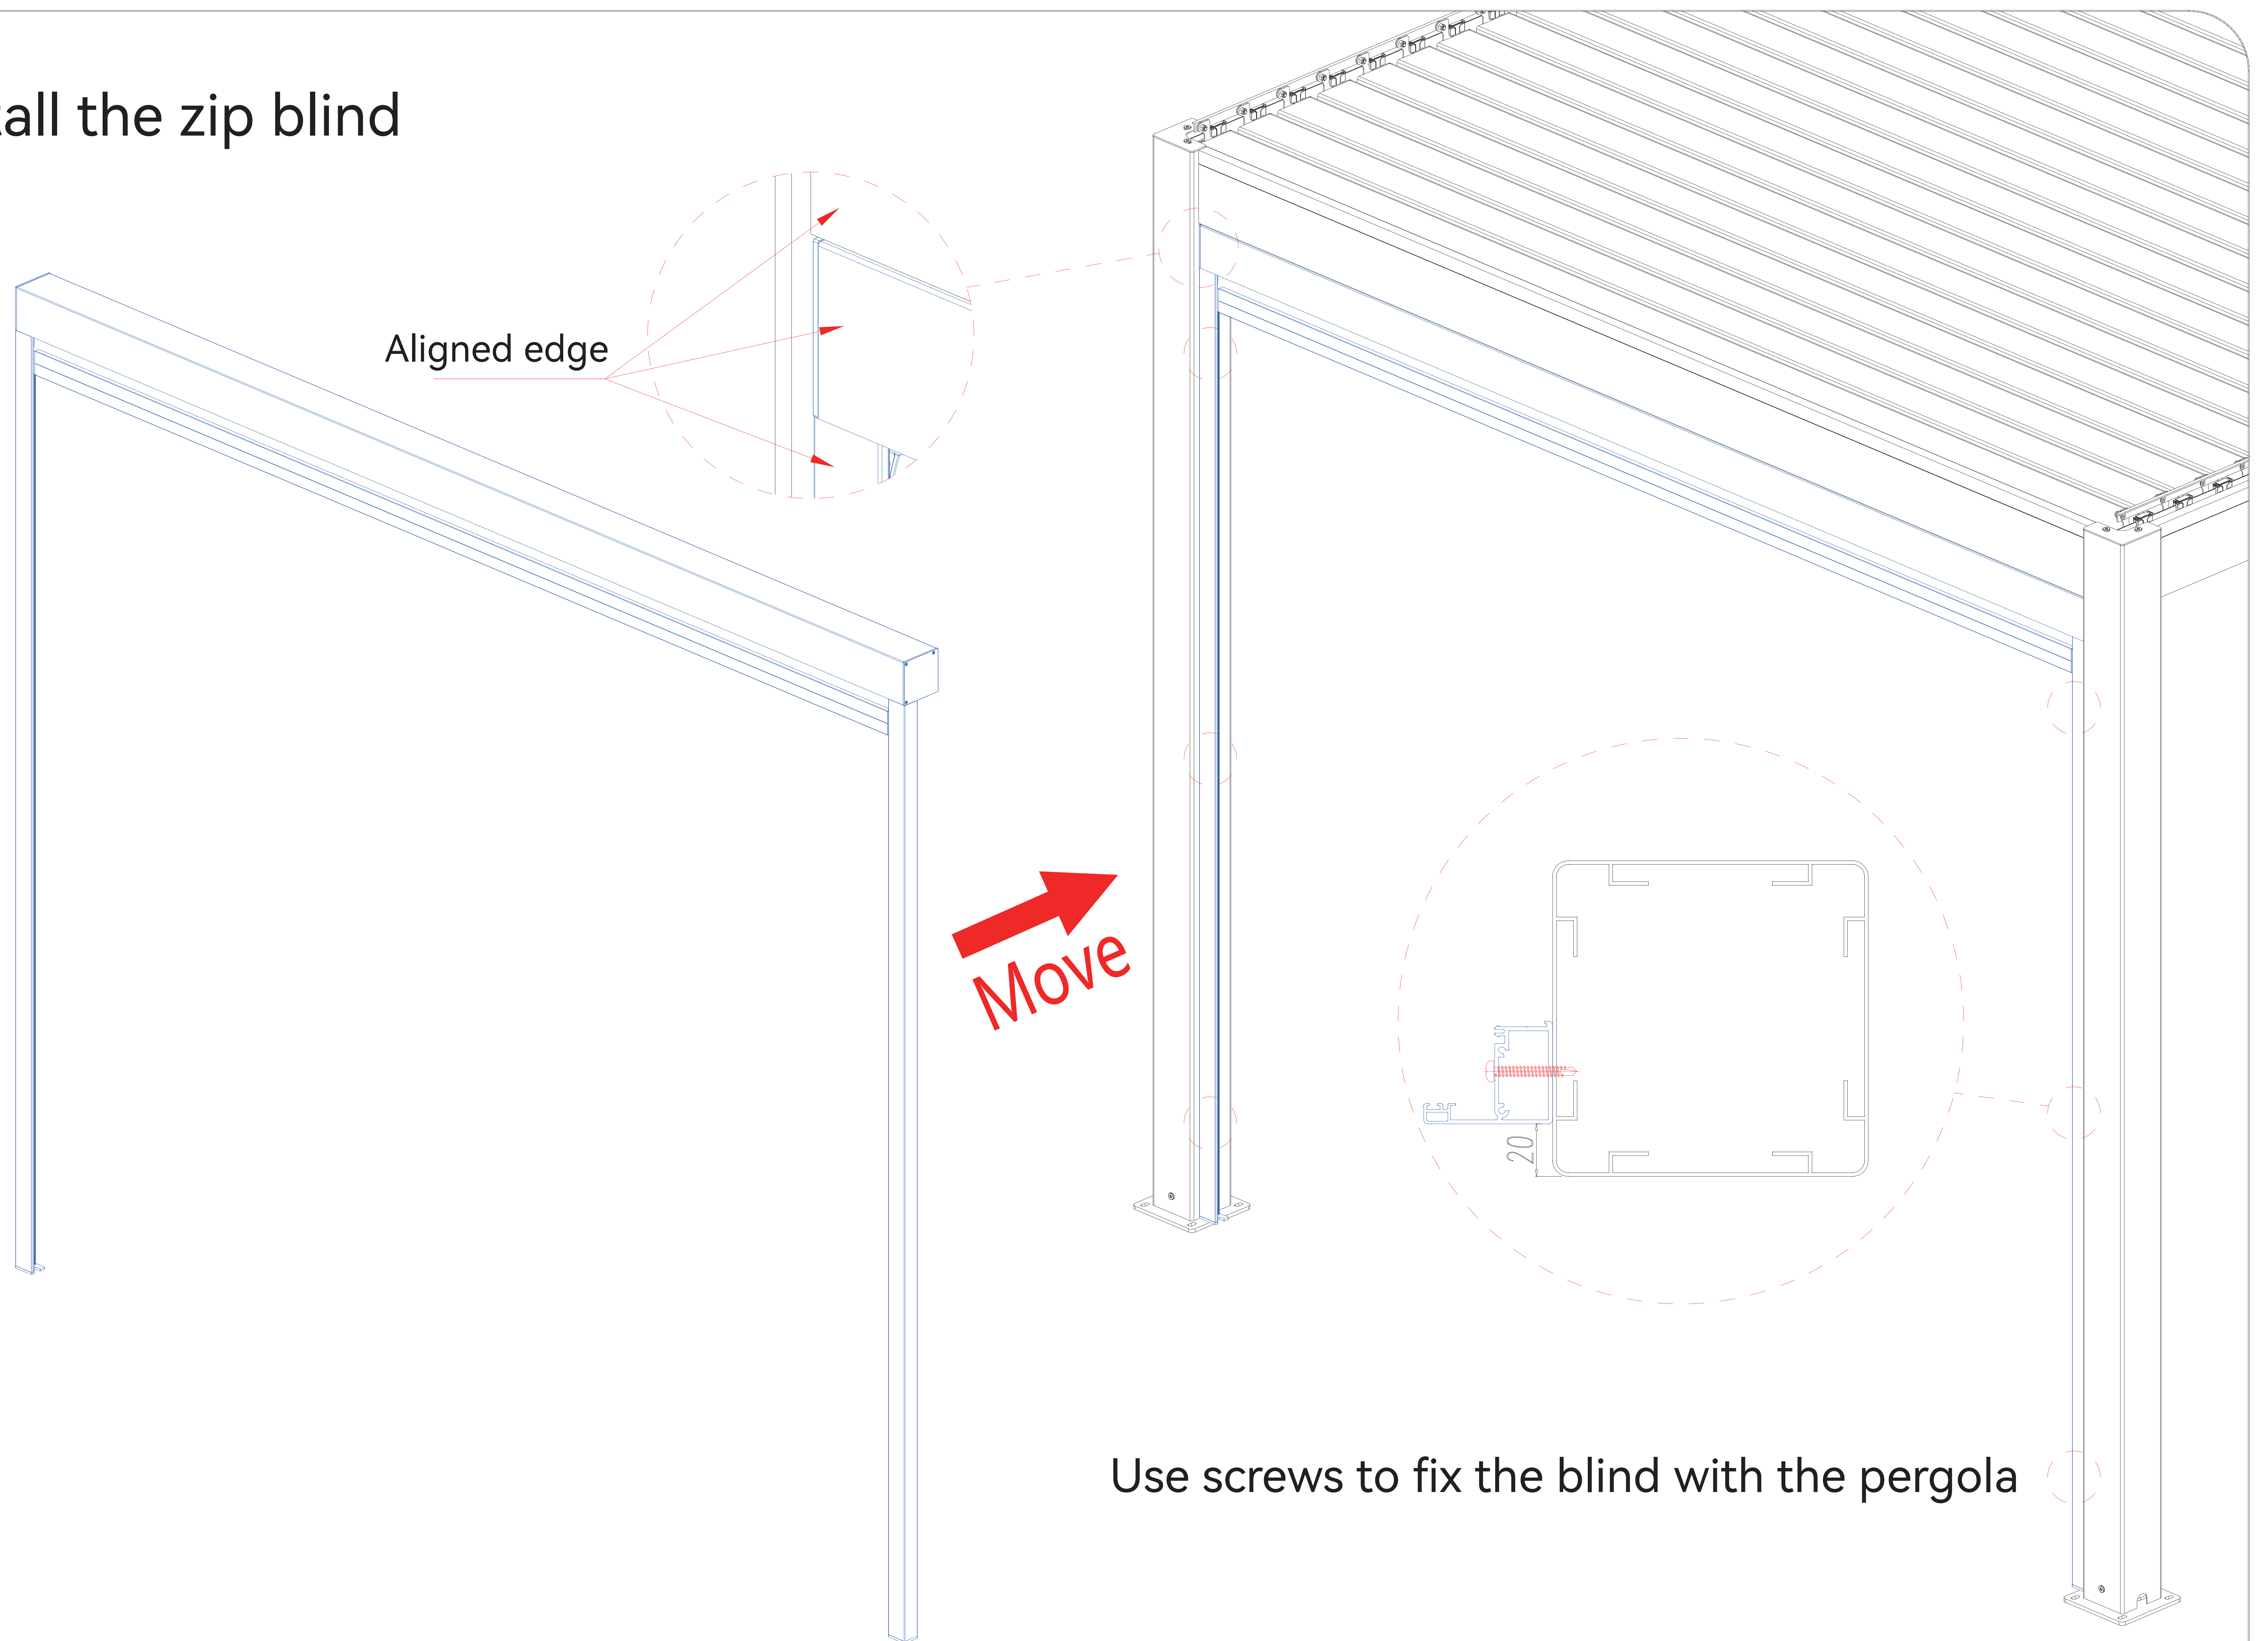


## 5. Inspection

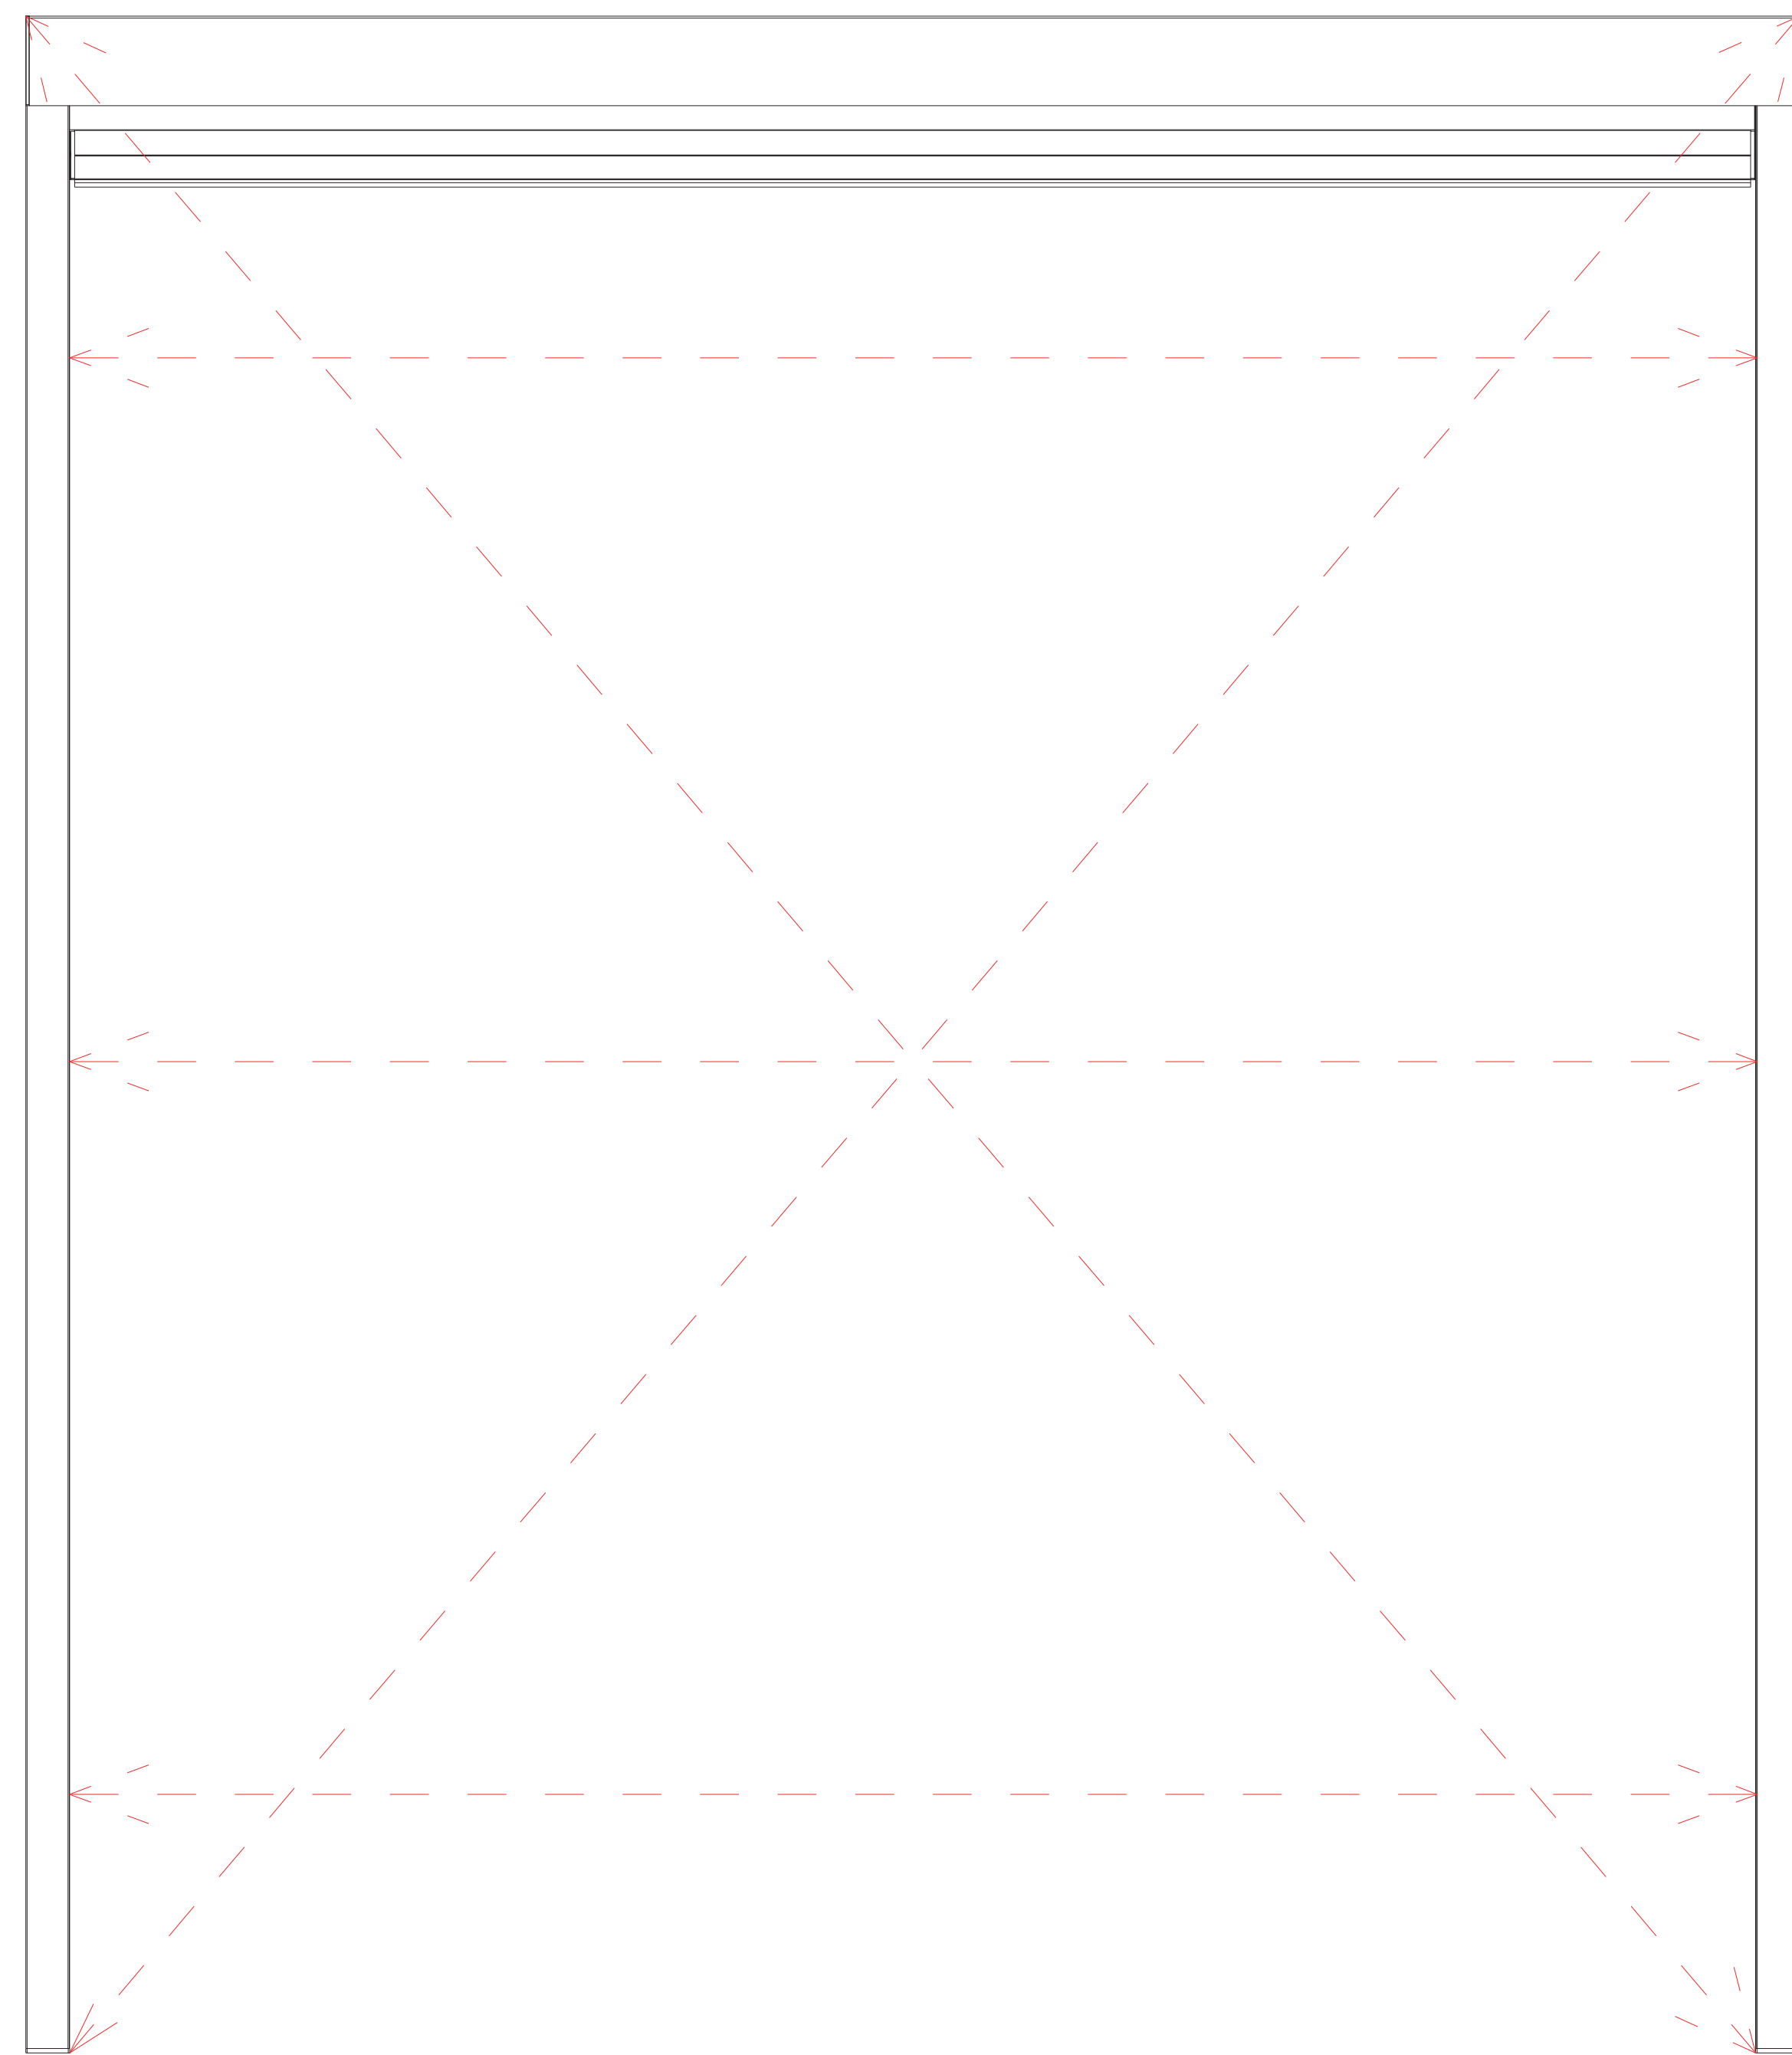



Diagonal equal ( $\pm 3\text{mm}$ )

The main frame is perpendicular to the track  
The top, middle and bottom edges should be  
equal in size ( $\pm 3\text{mm}$ )

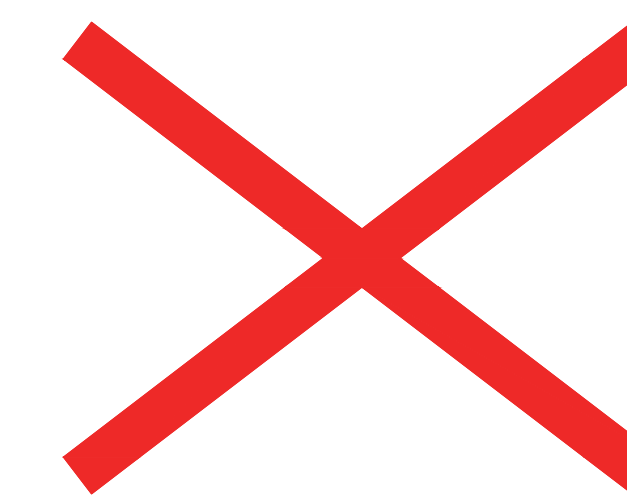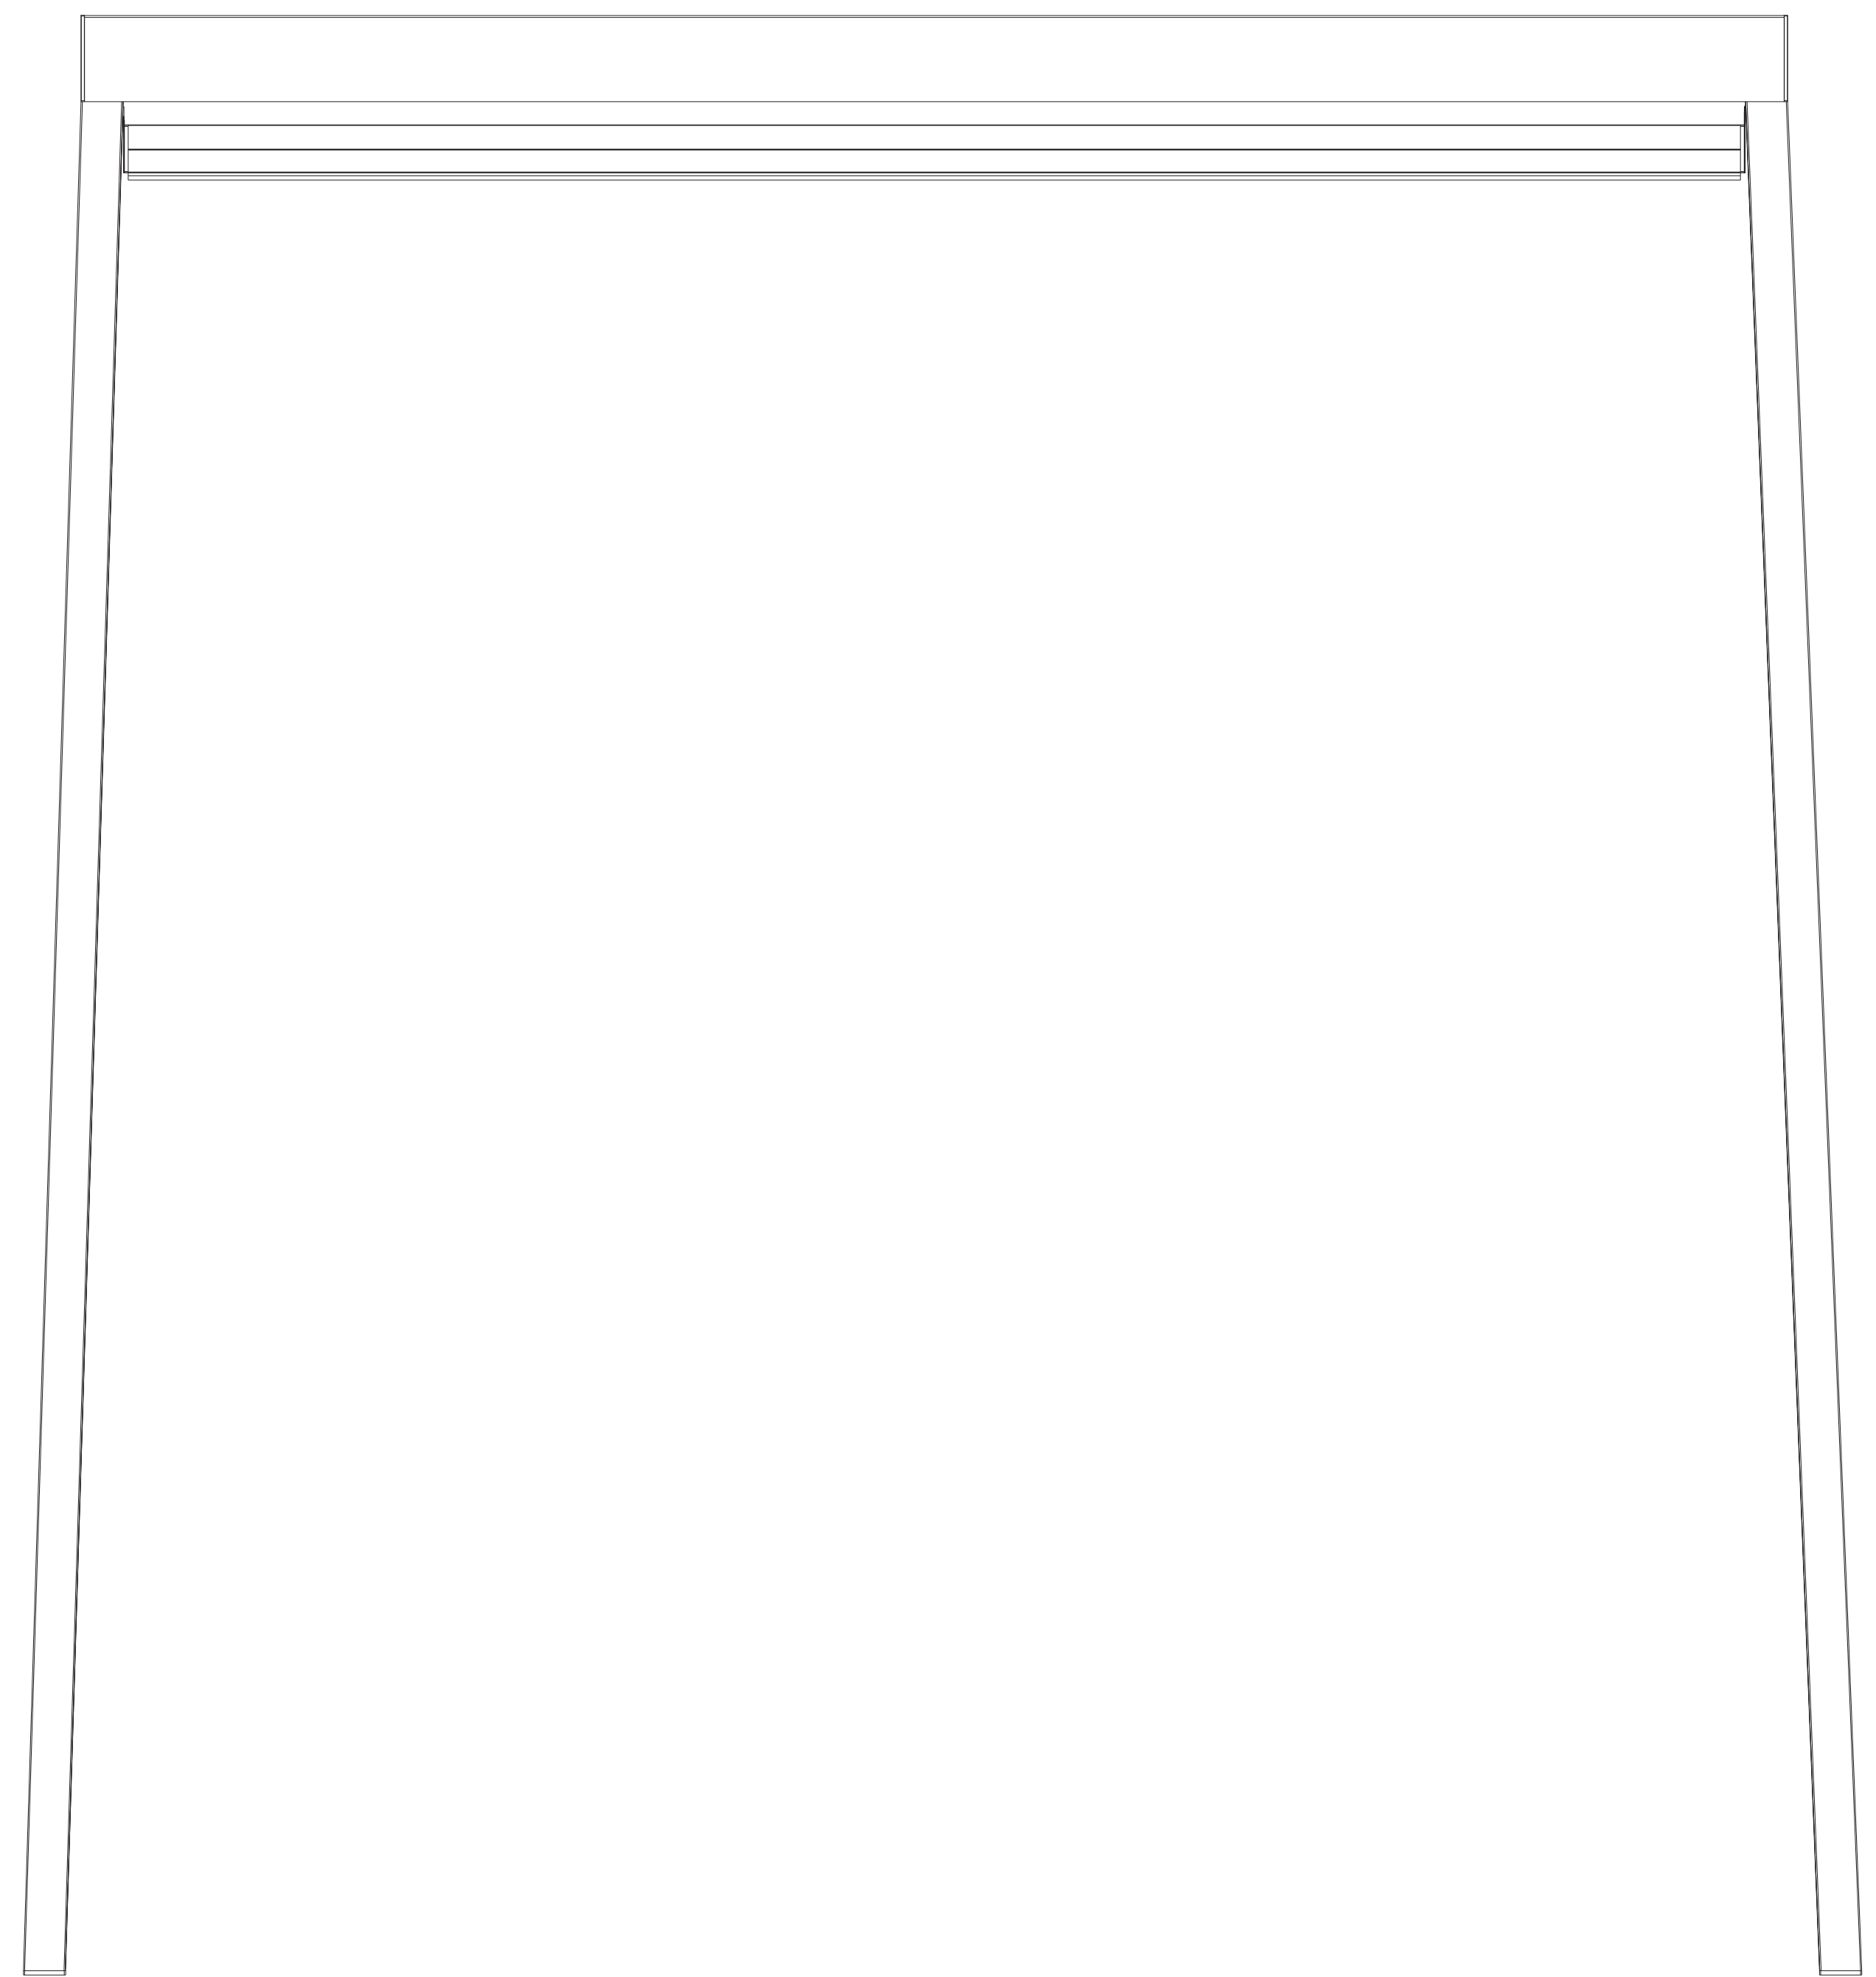
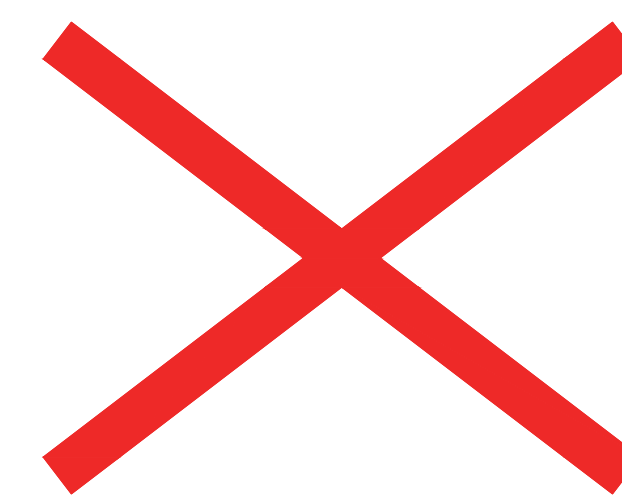
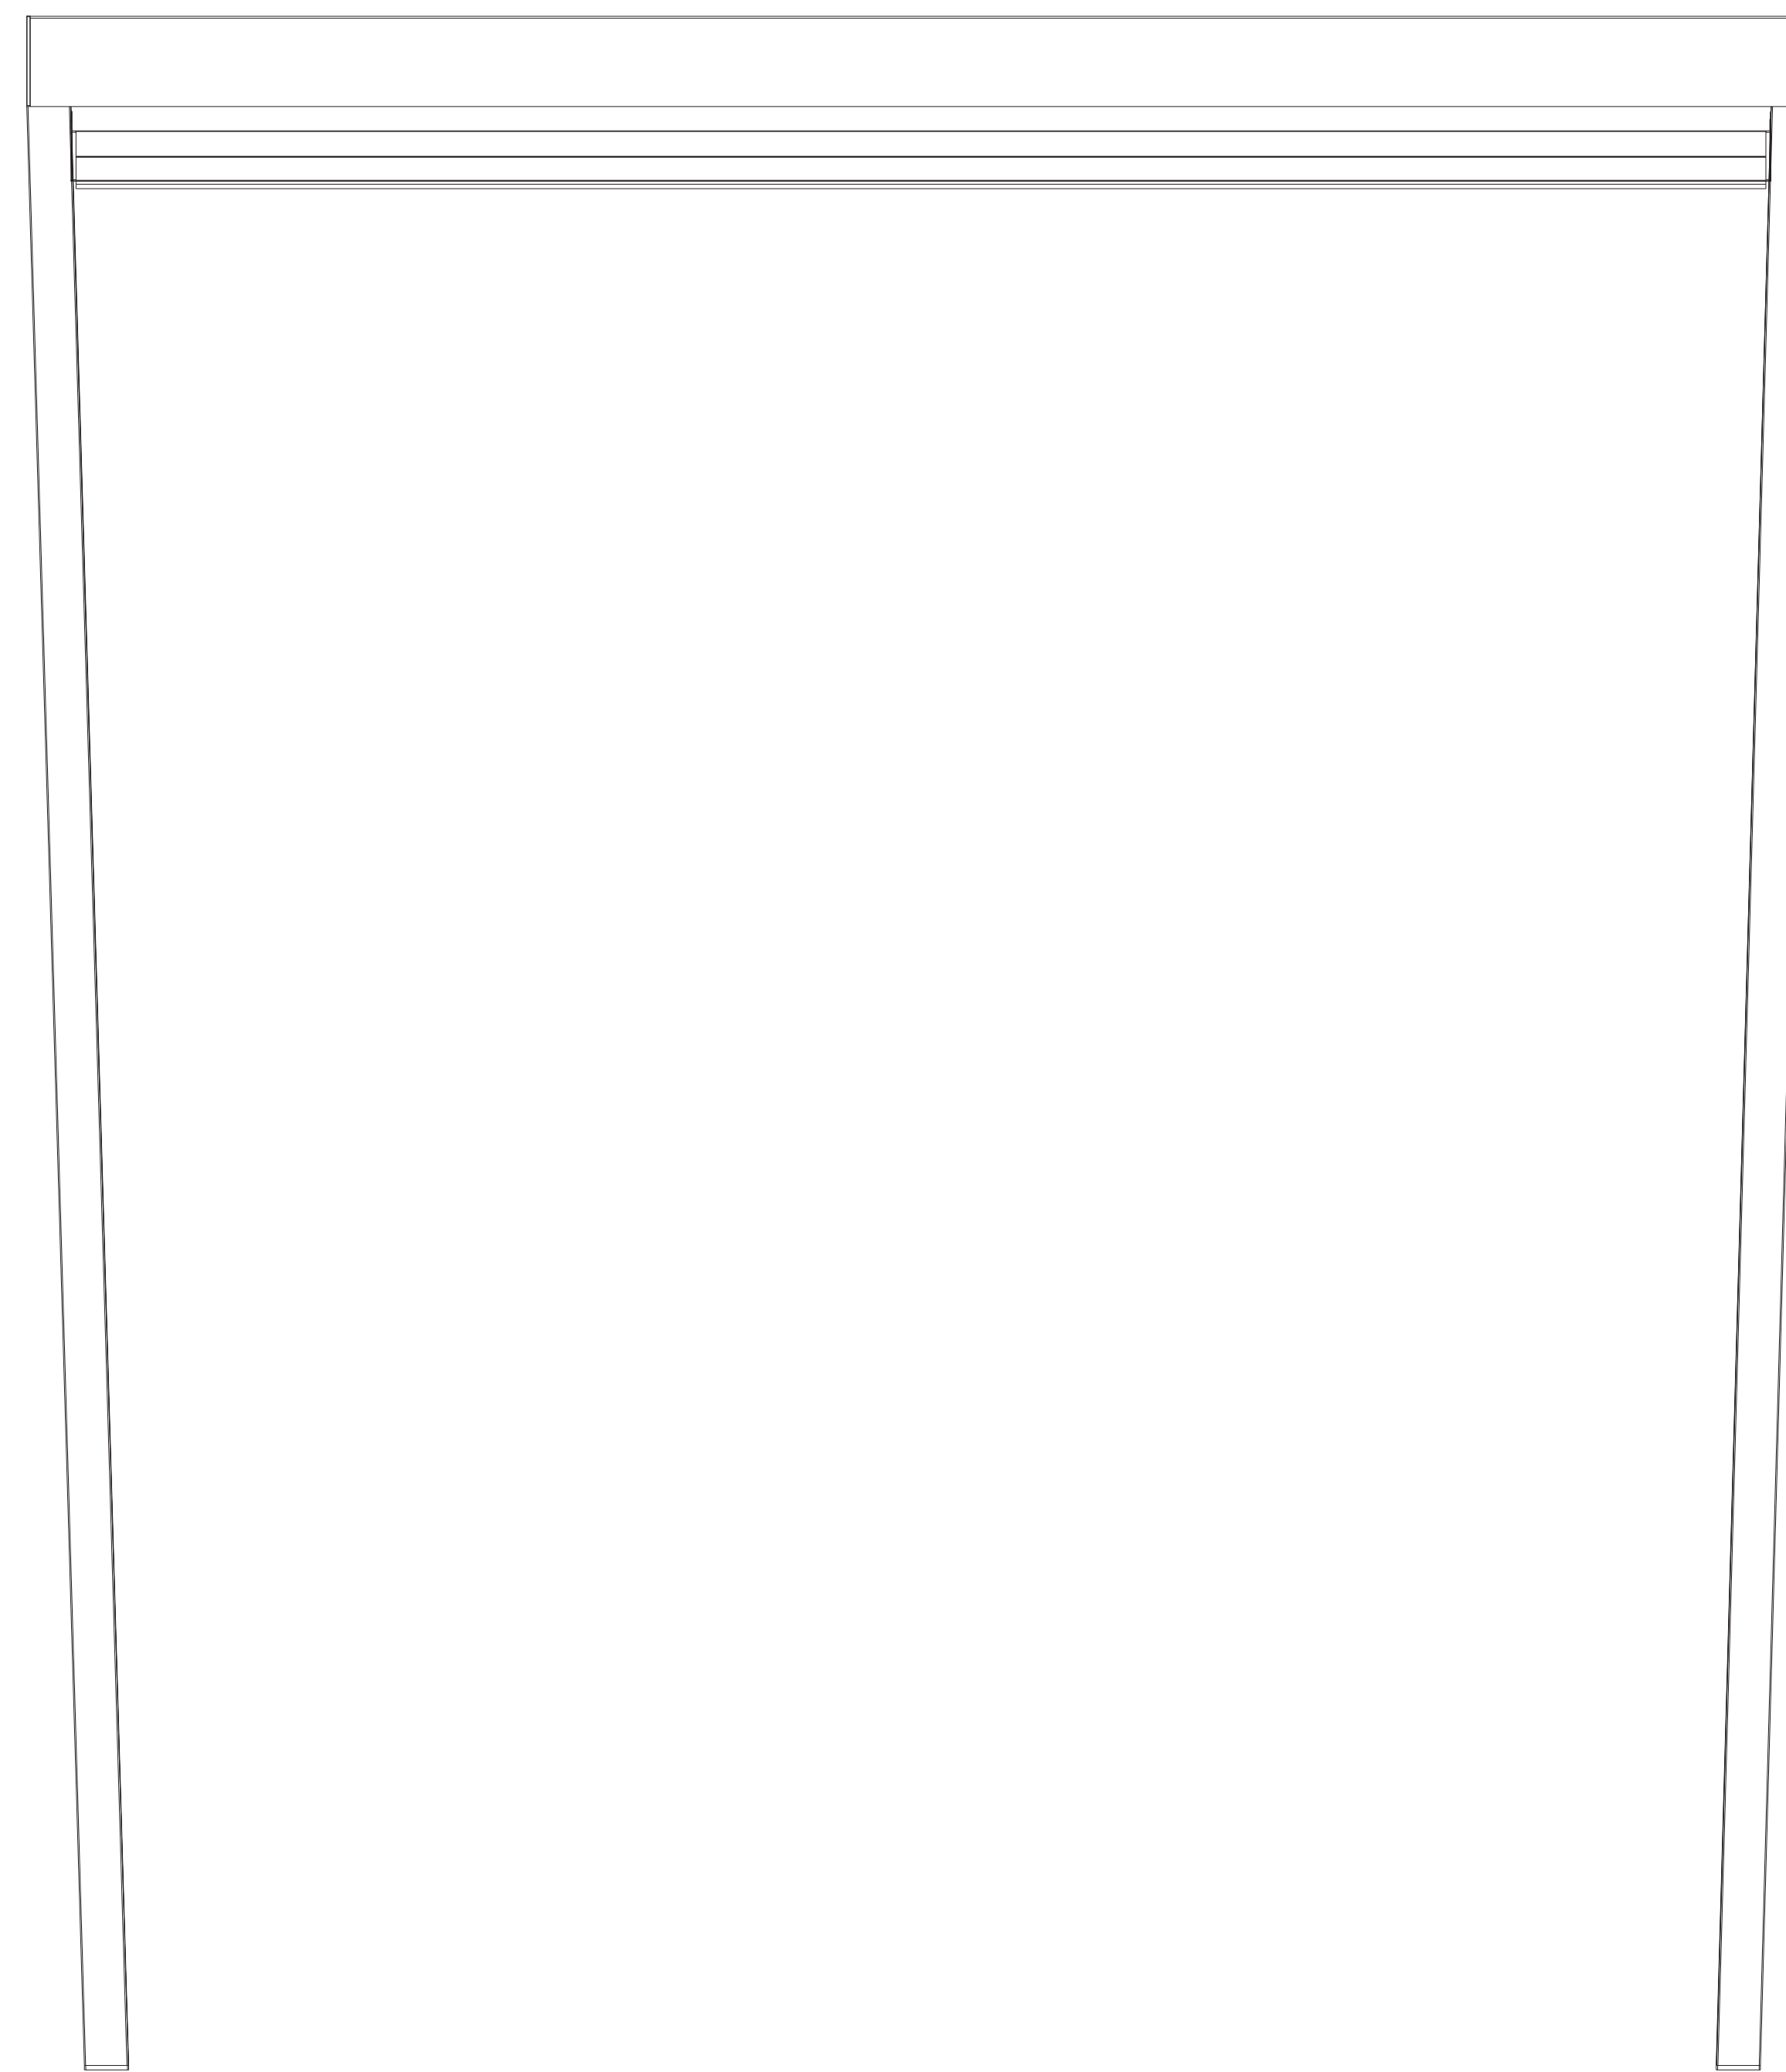




## 6. Install plastic inner rail

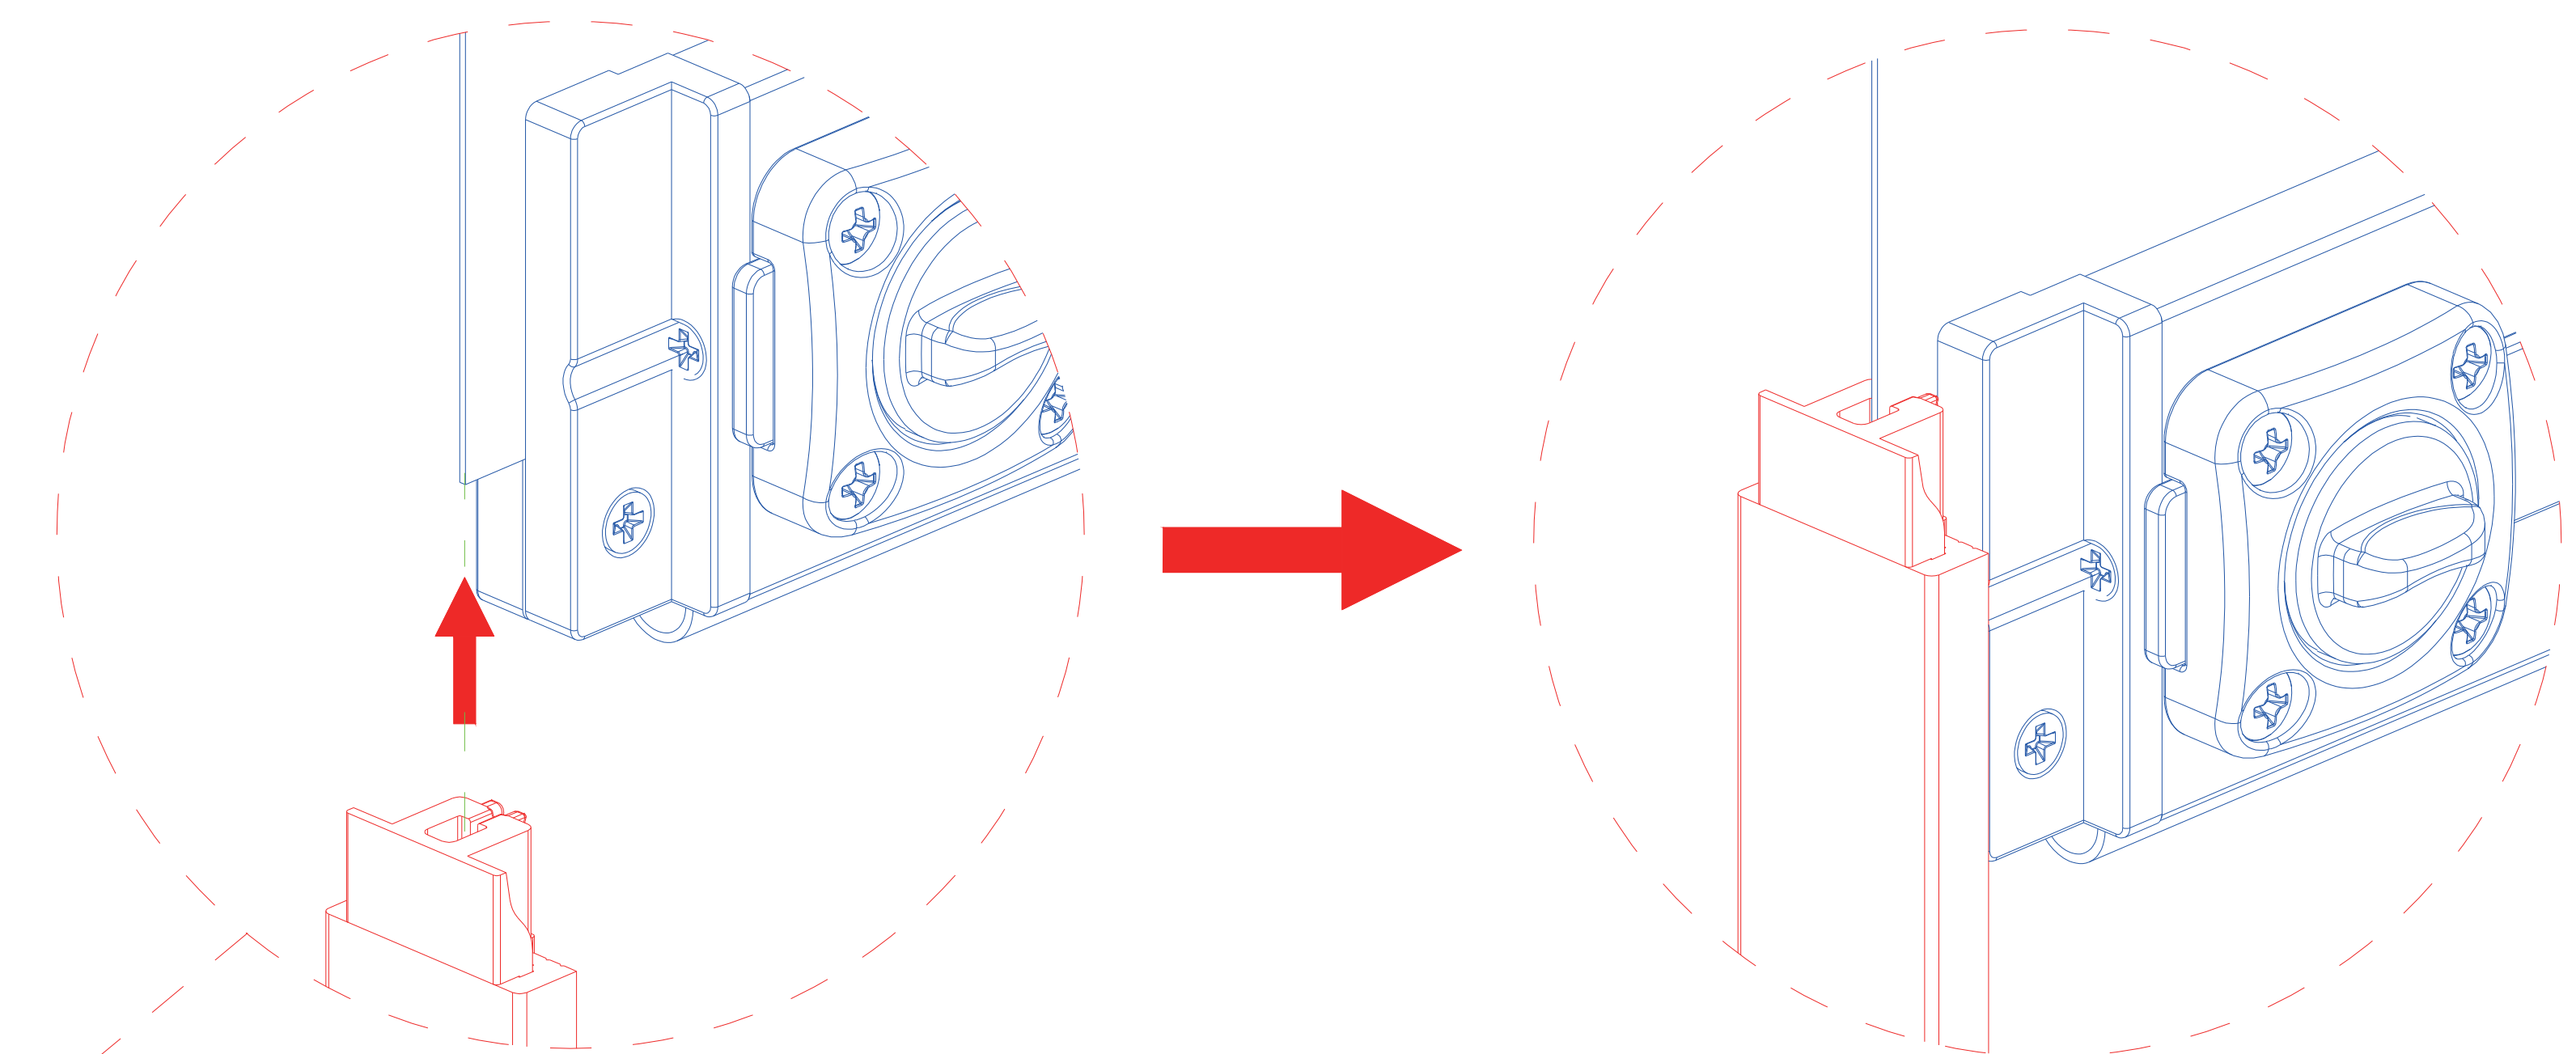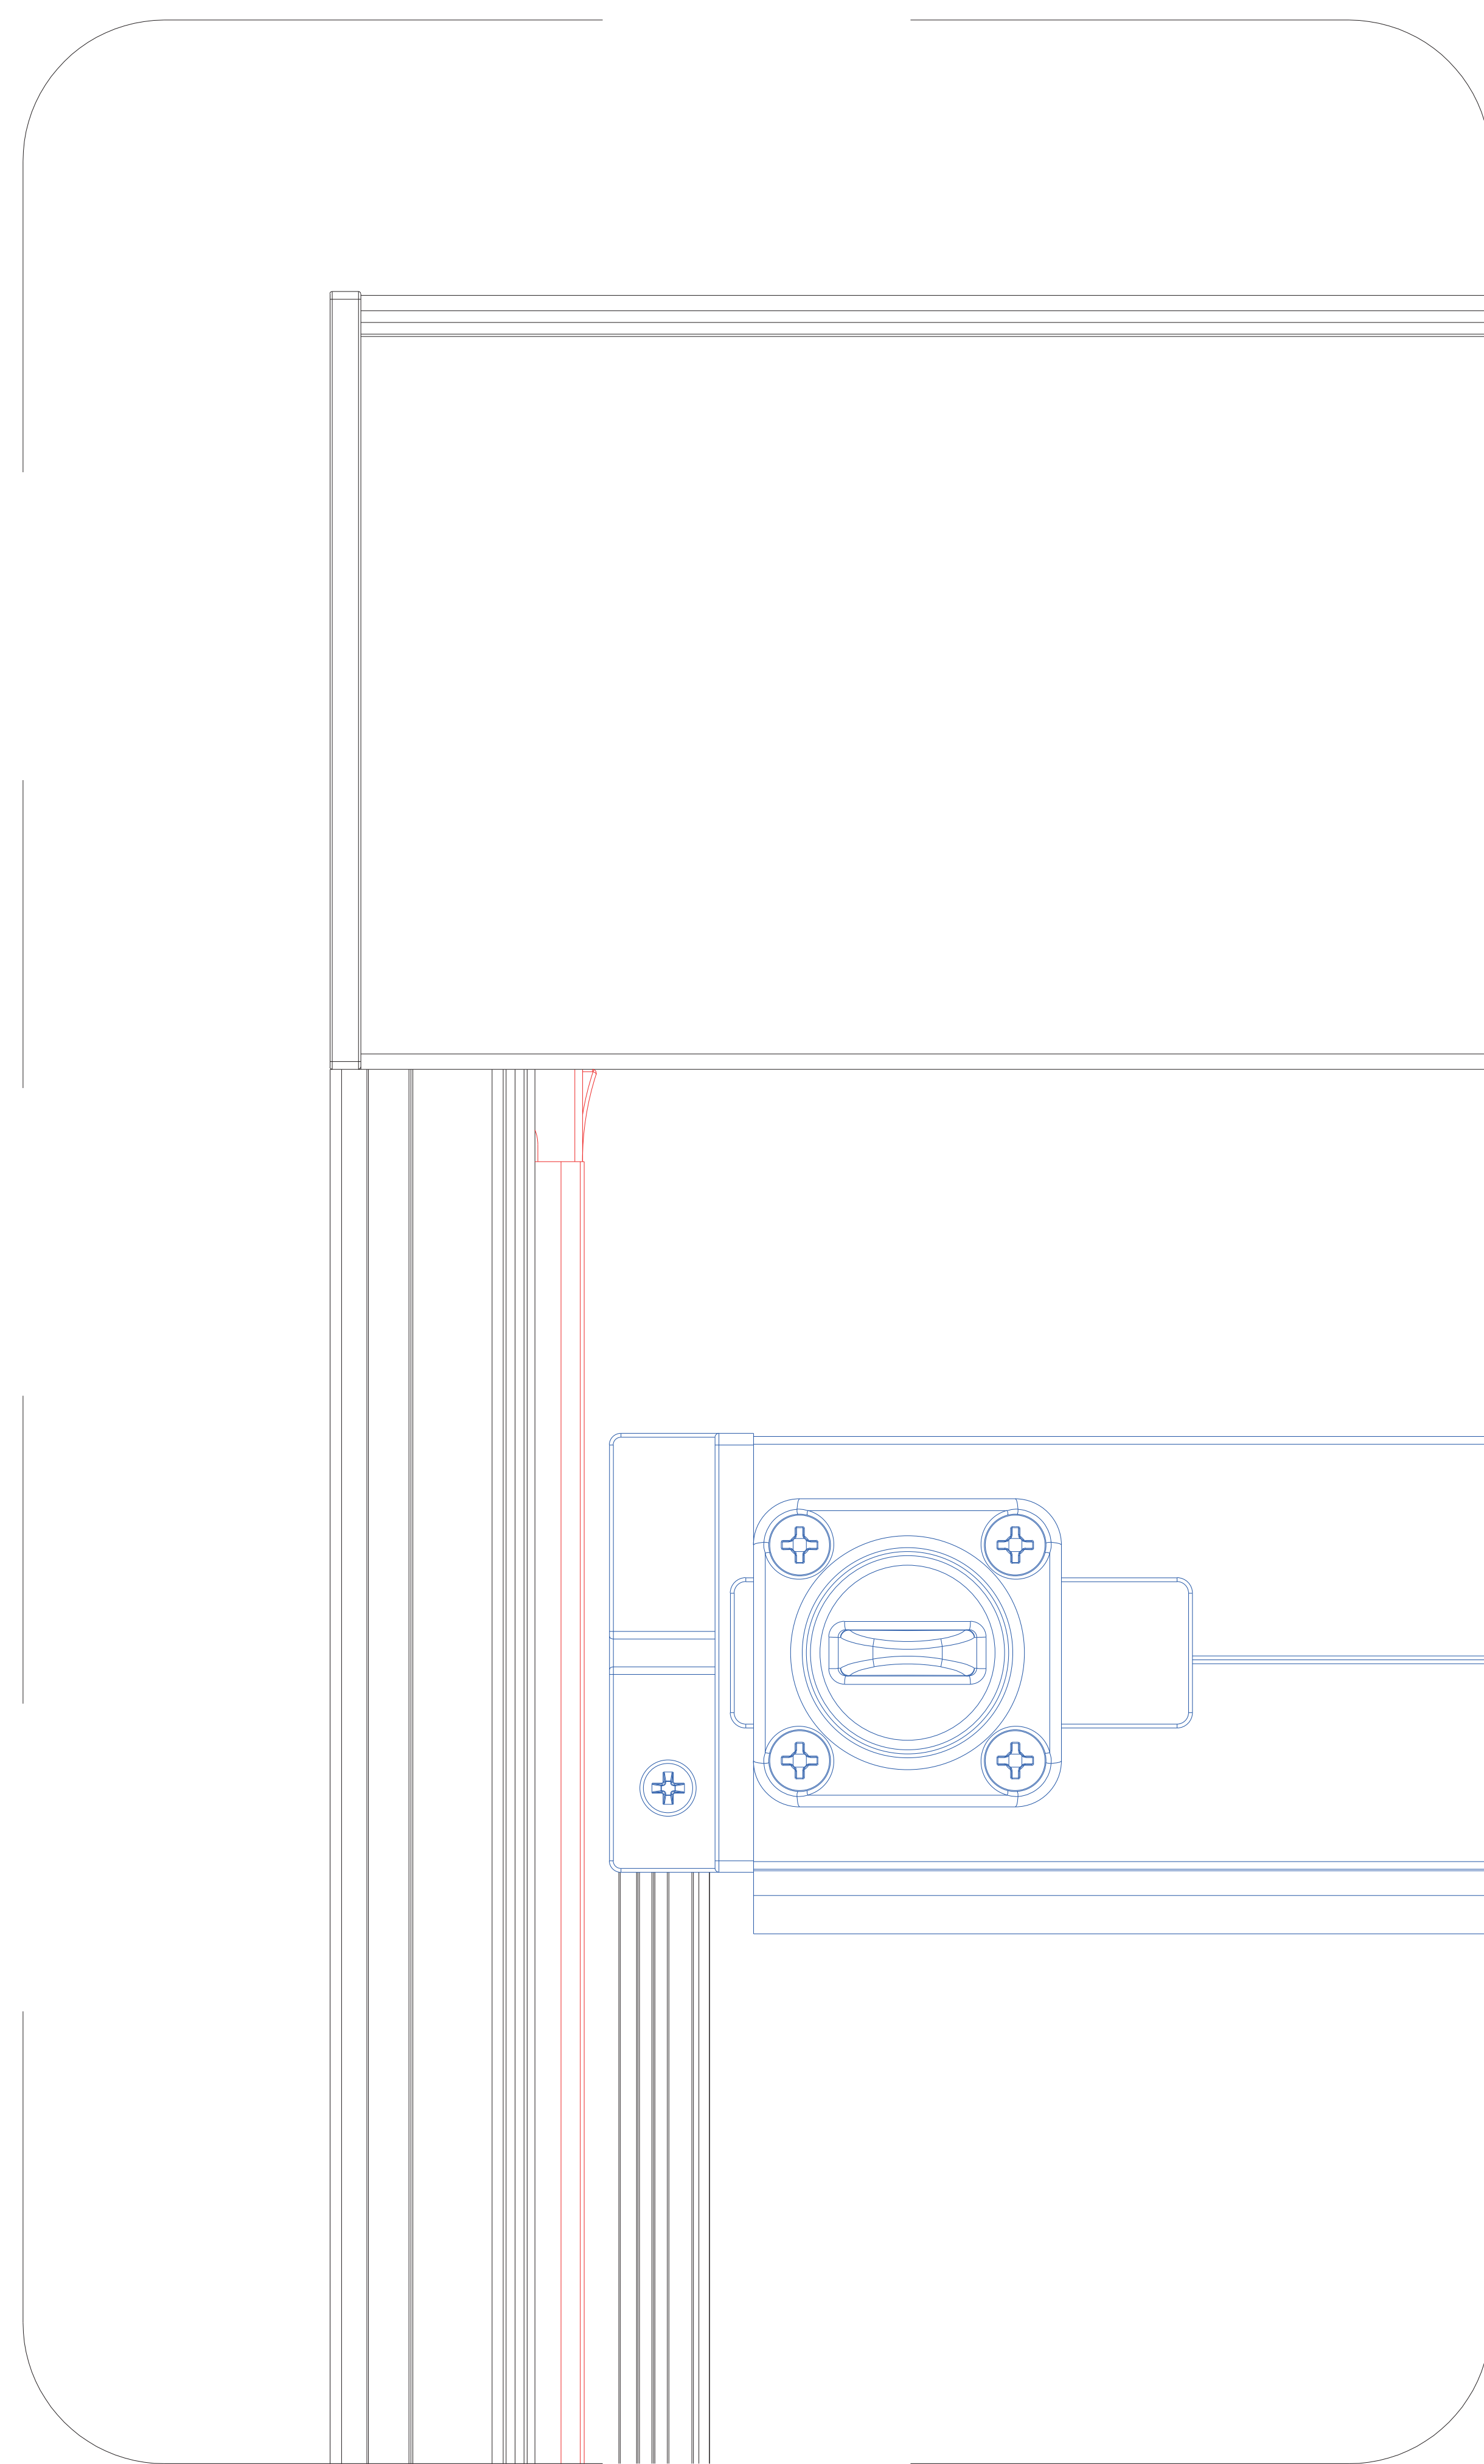


1. Zipper inserted into plastic inner rail

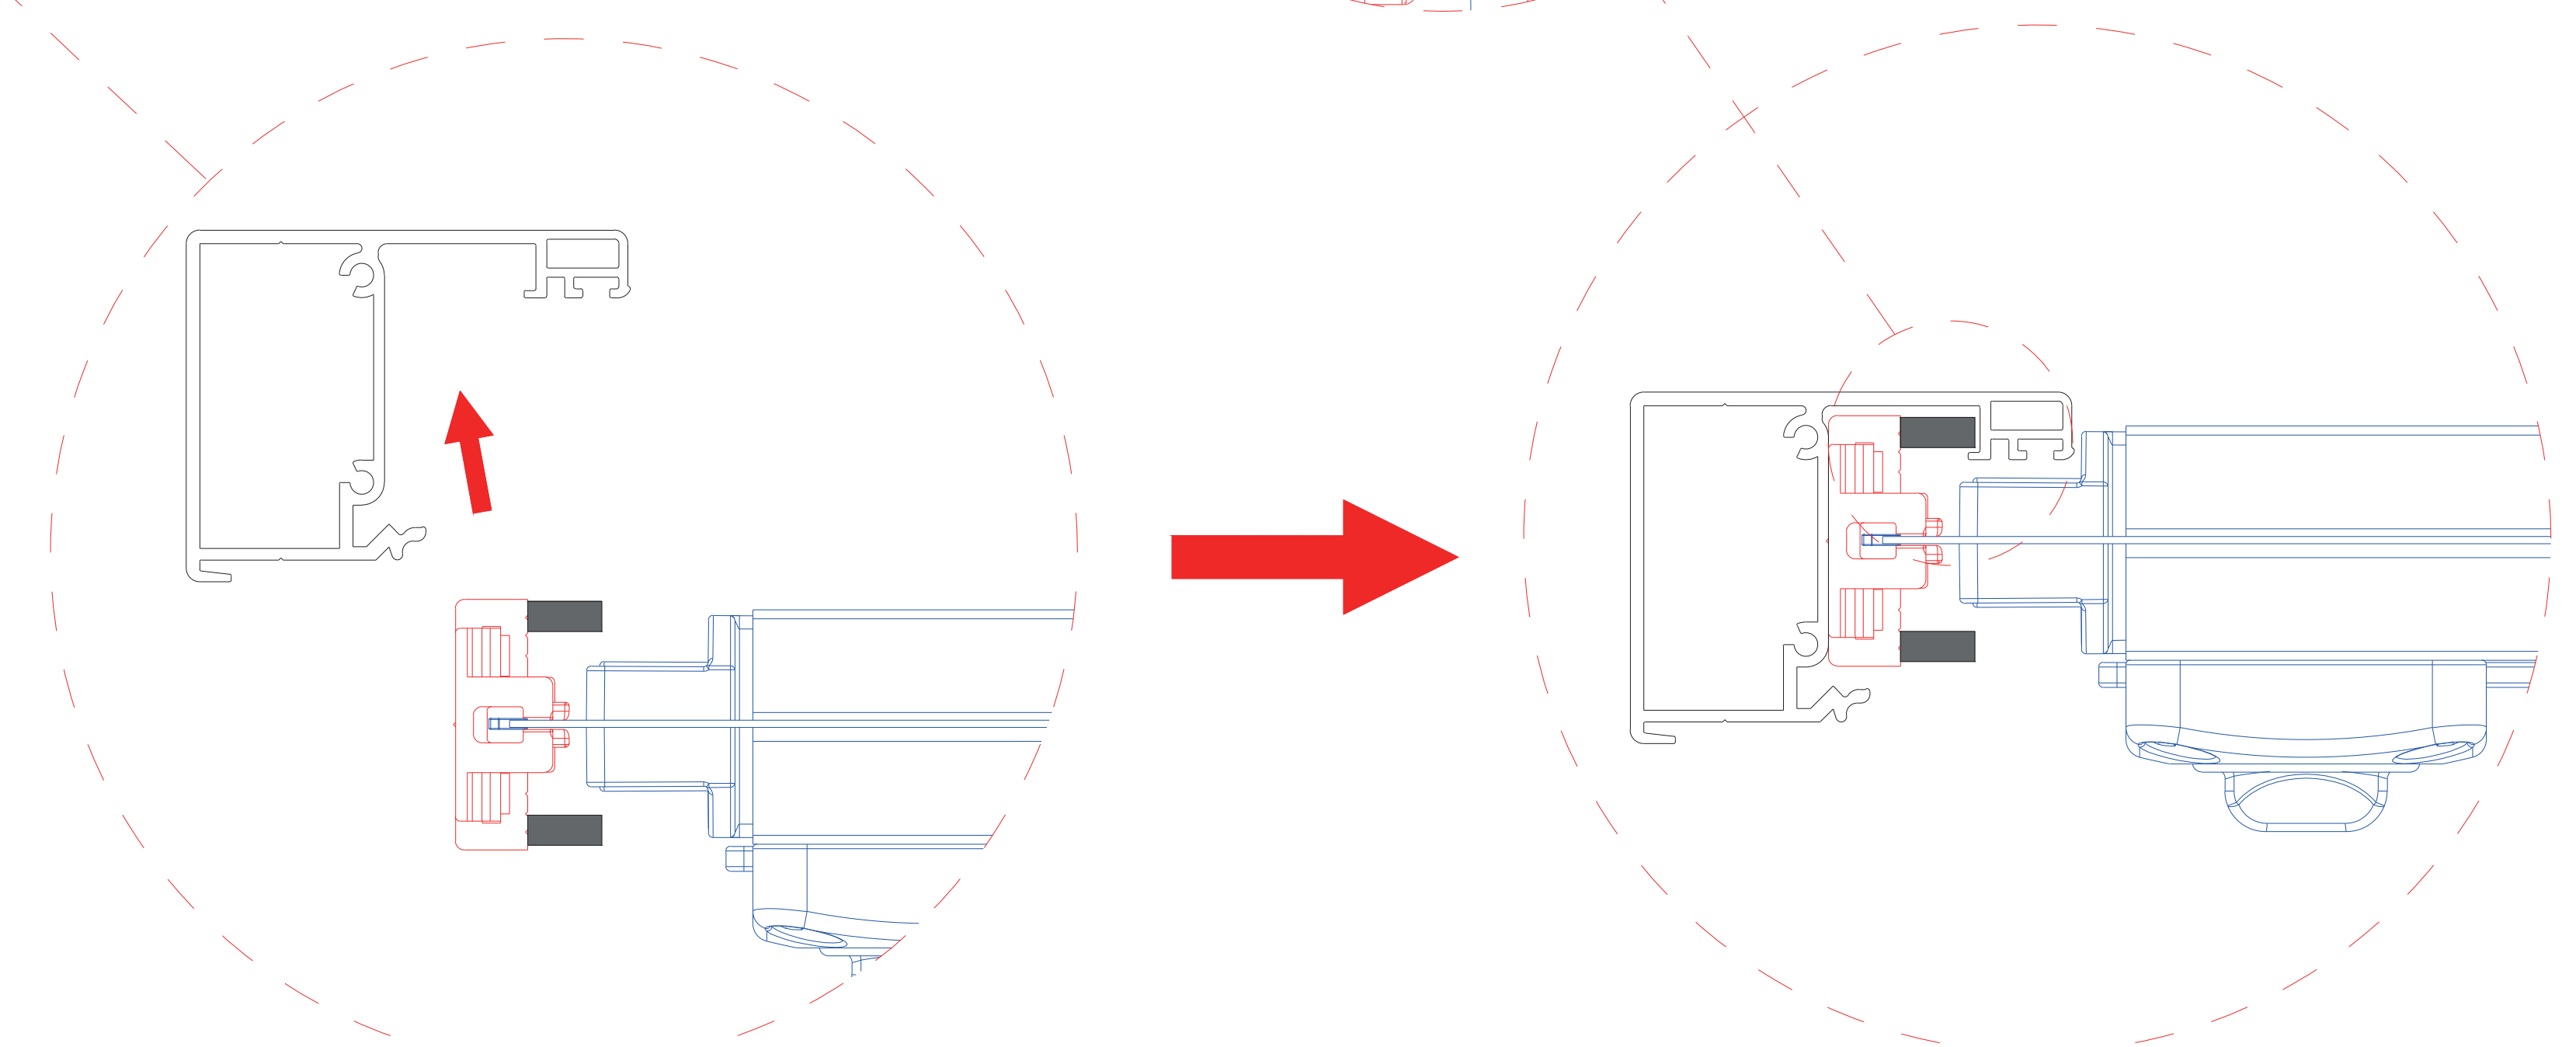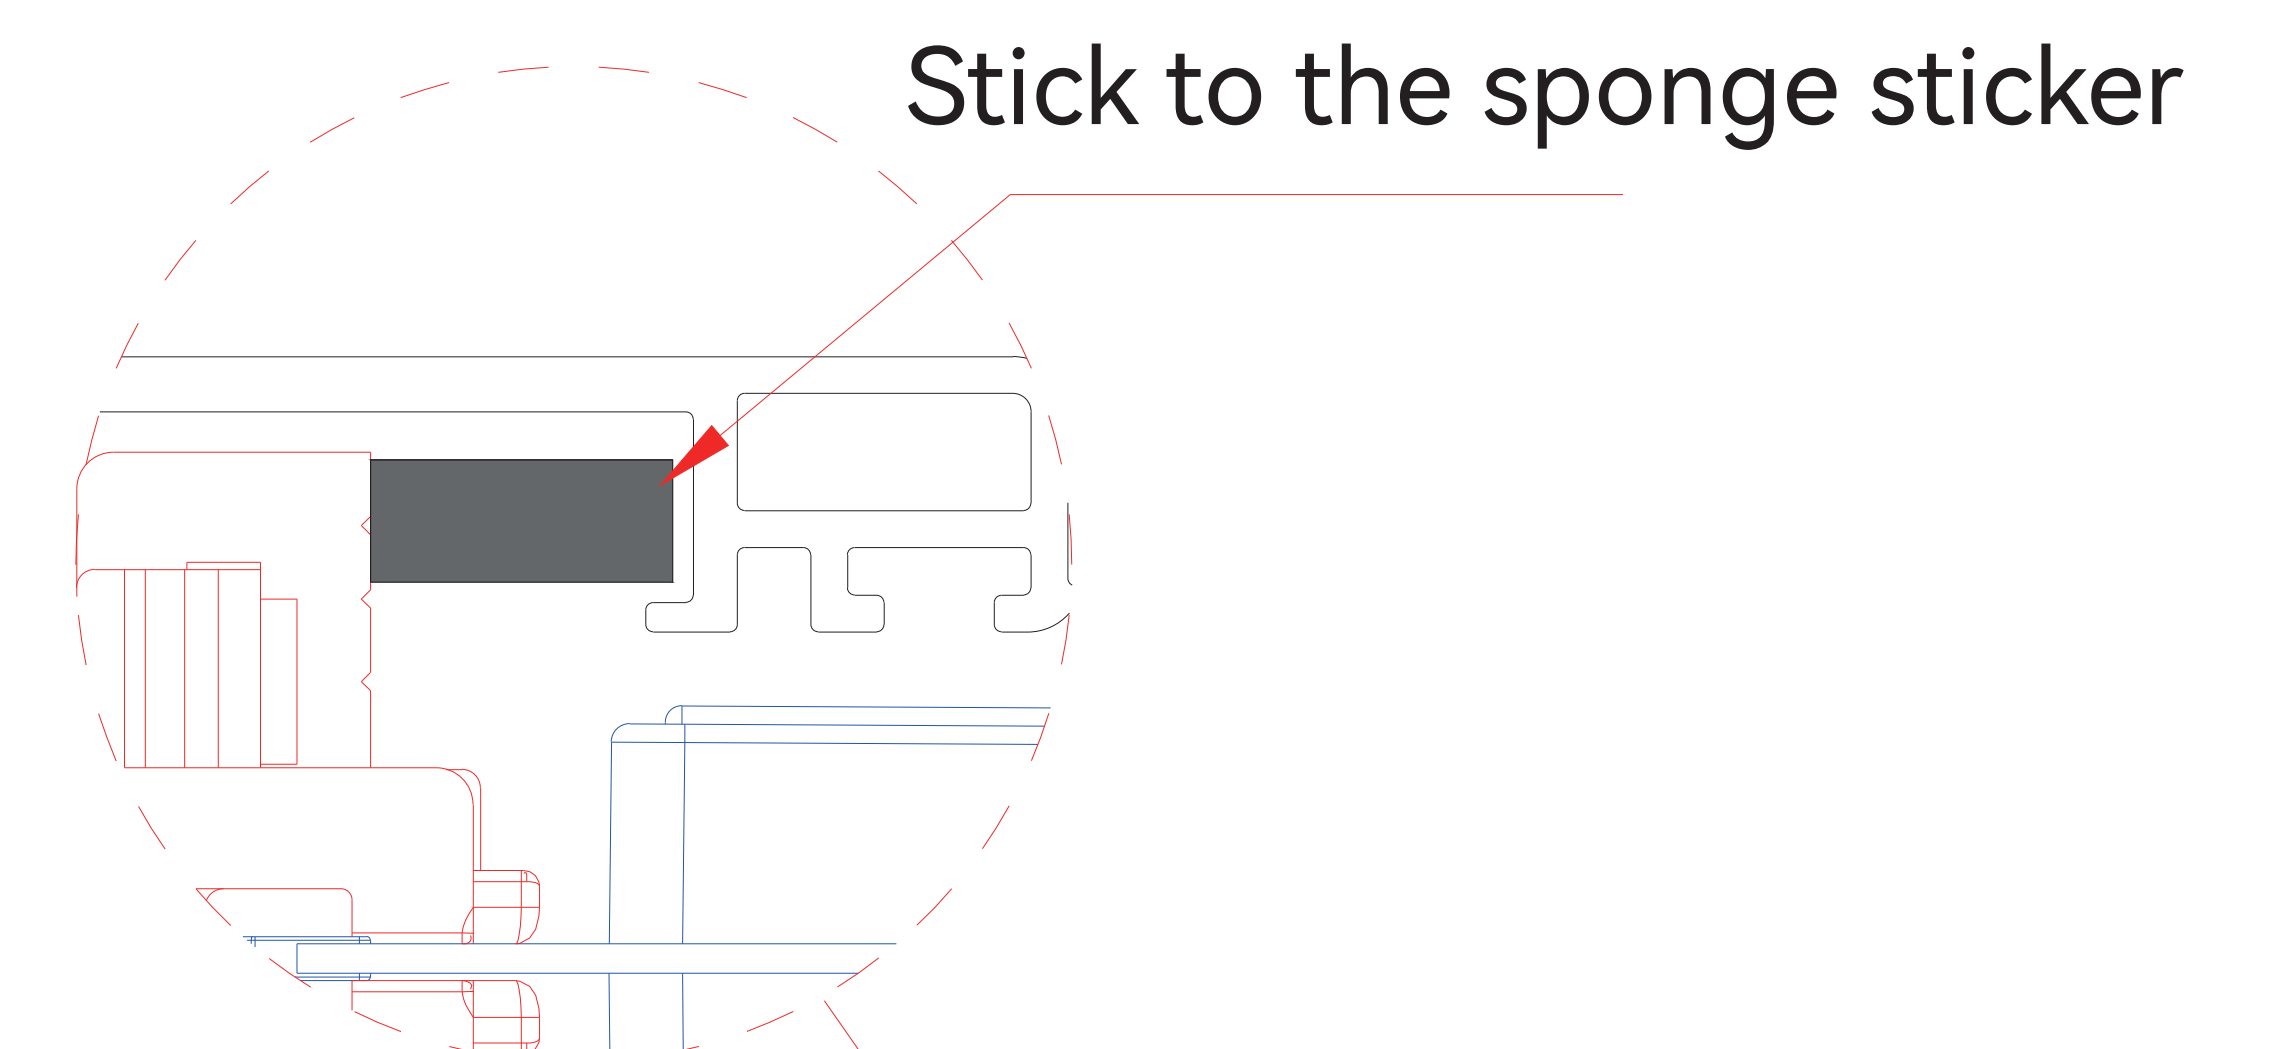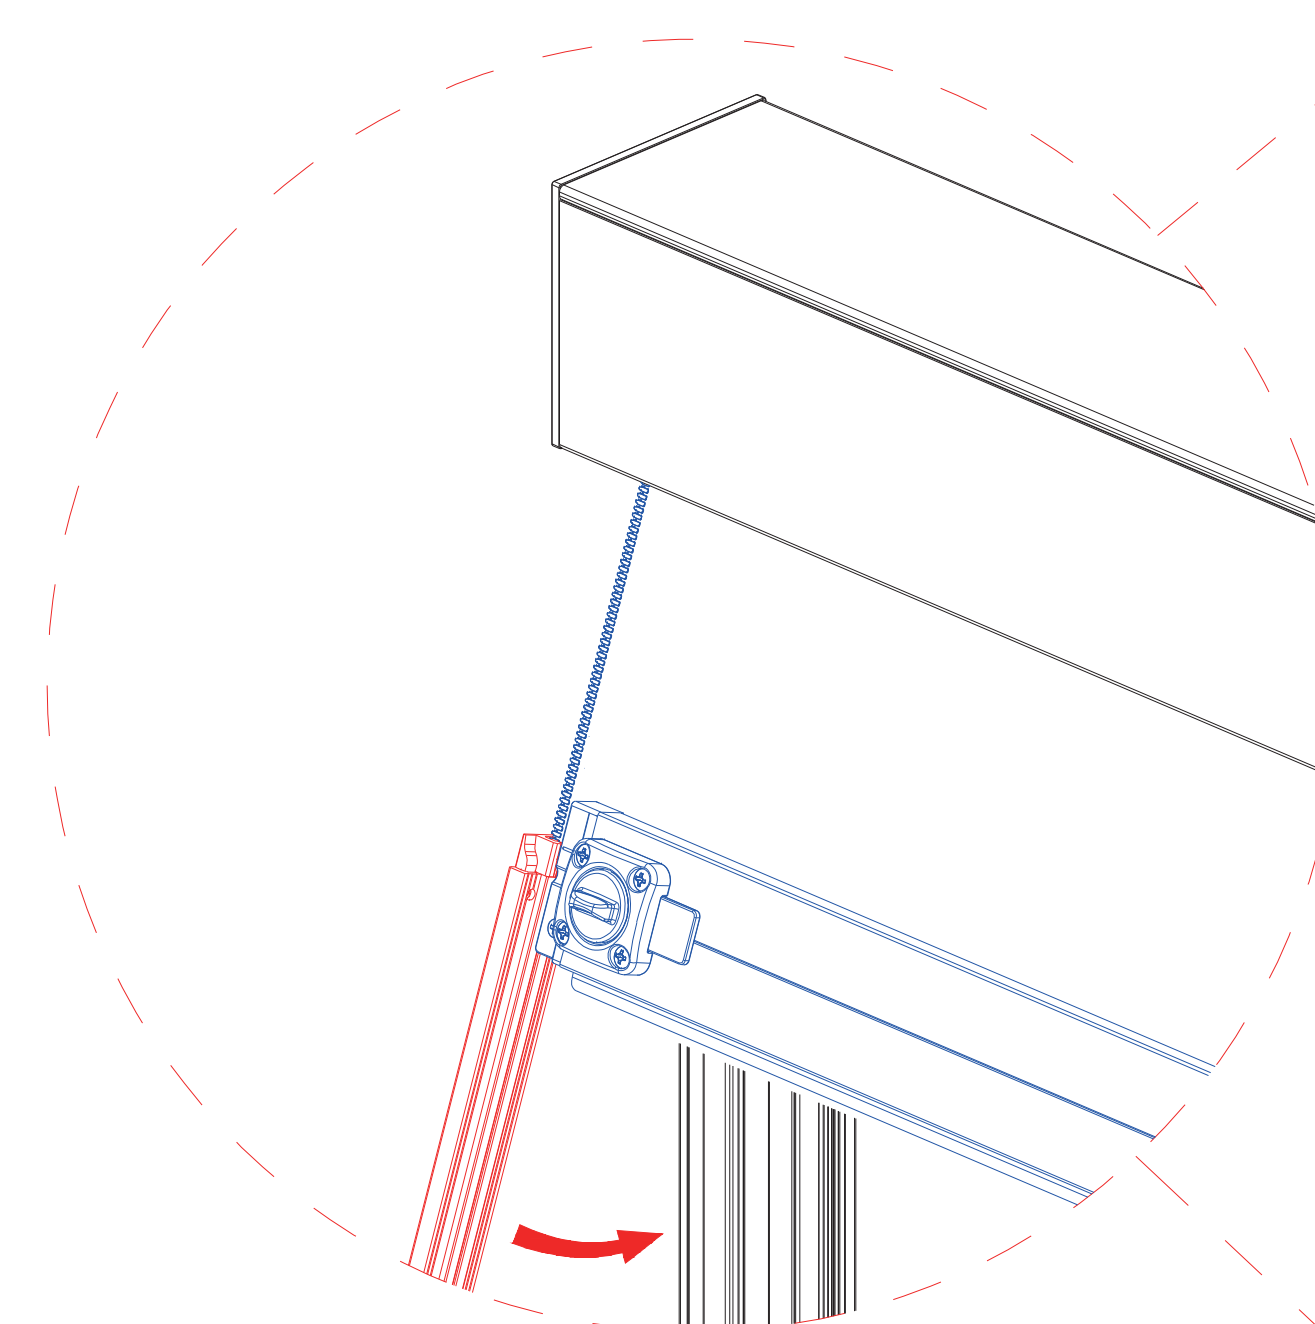



2. Install it on the front rail

## 7.Lock the track cover

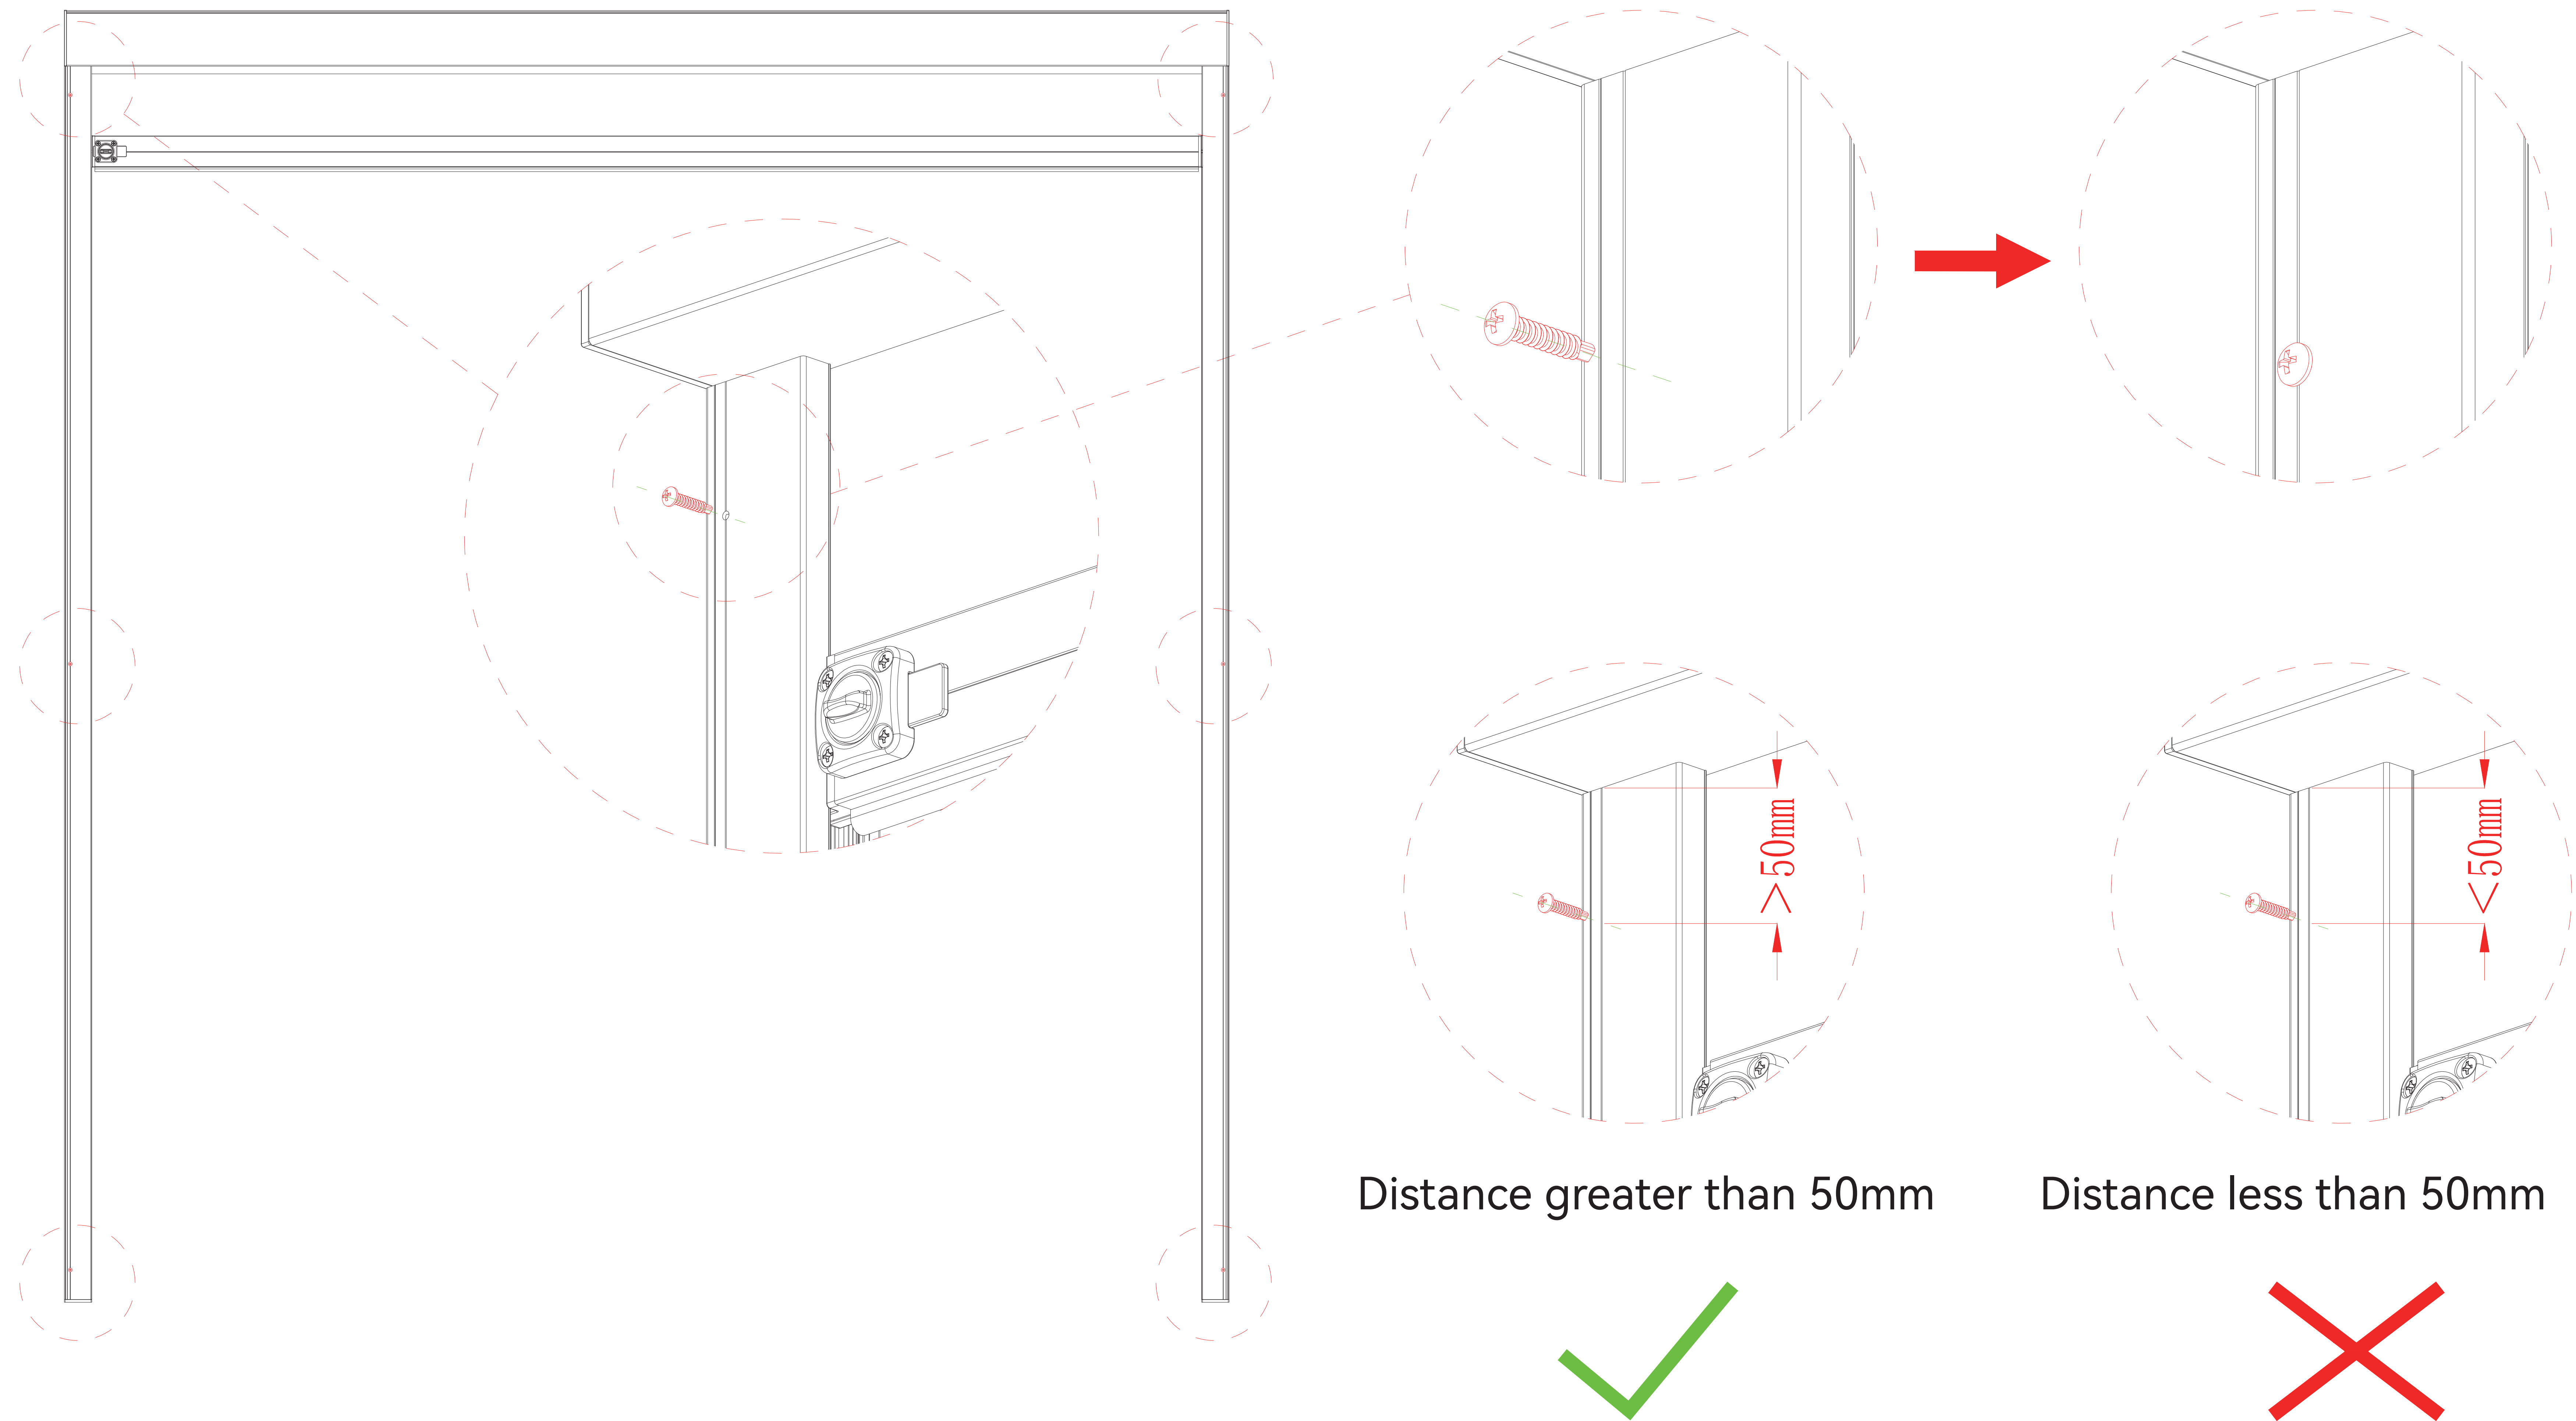

## 8. Precautions

1. Do not draw/pull the zip blind from both sides alone to avoid the fabric leaning to one side.
2. Draw/pull fabric curtains in the middle as much as possible.

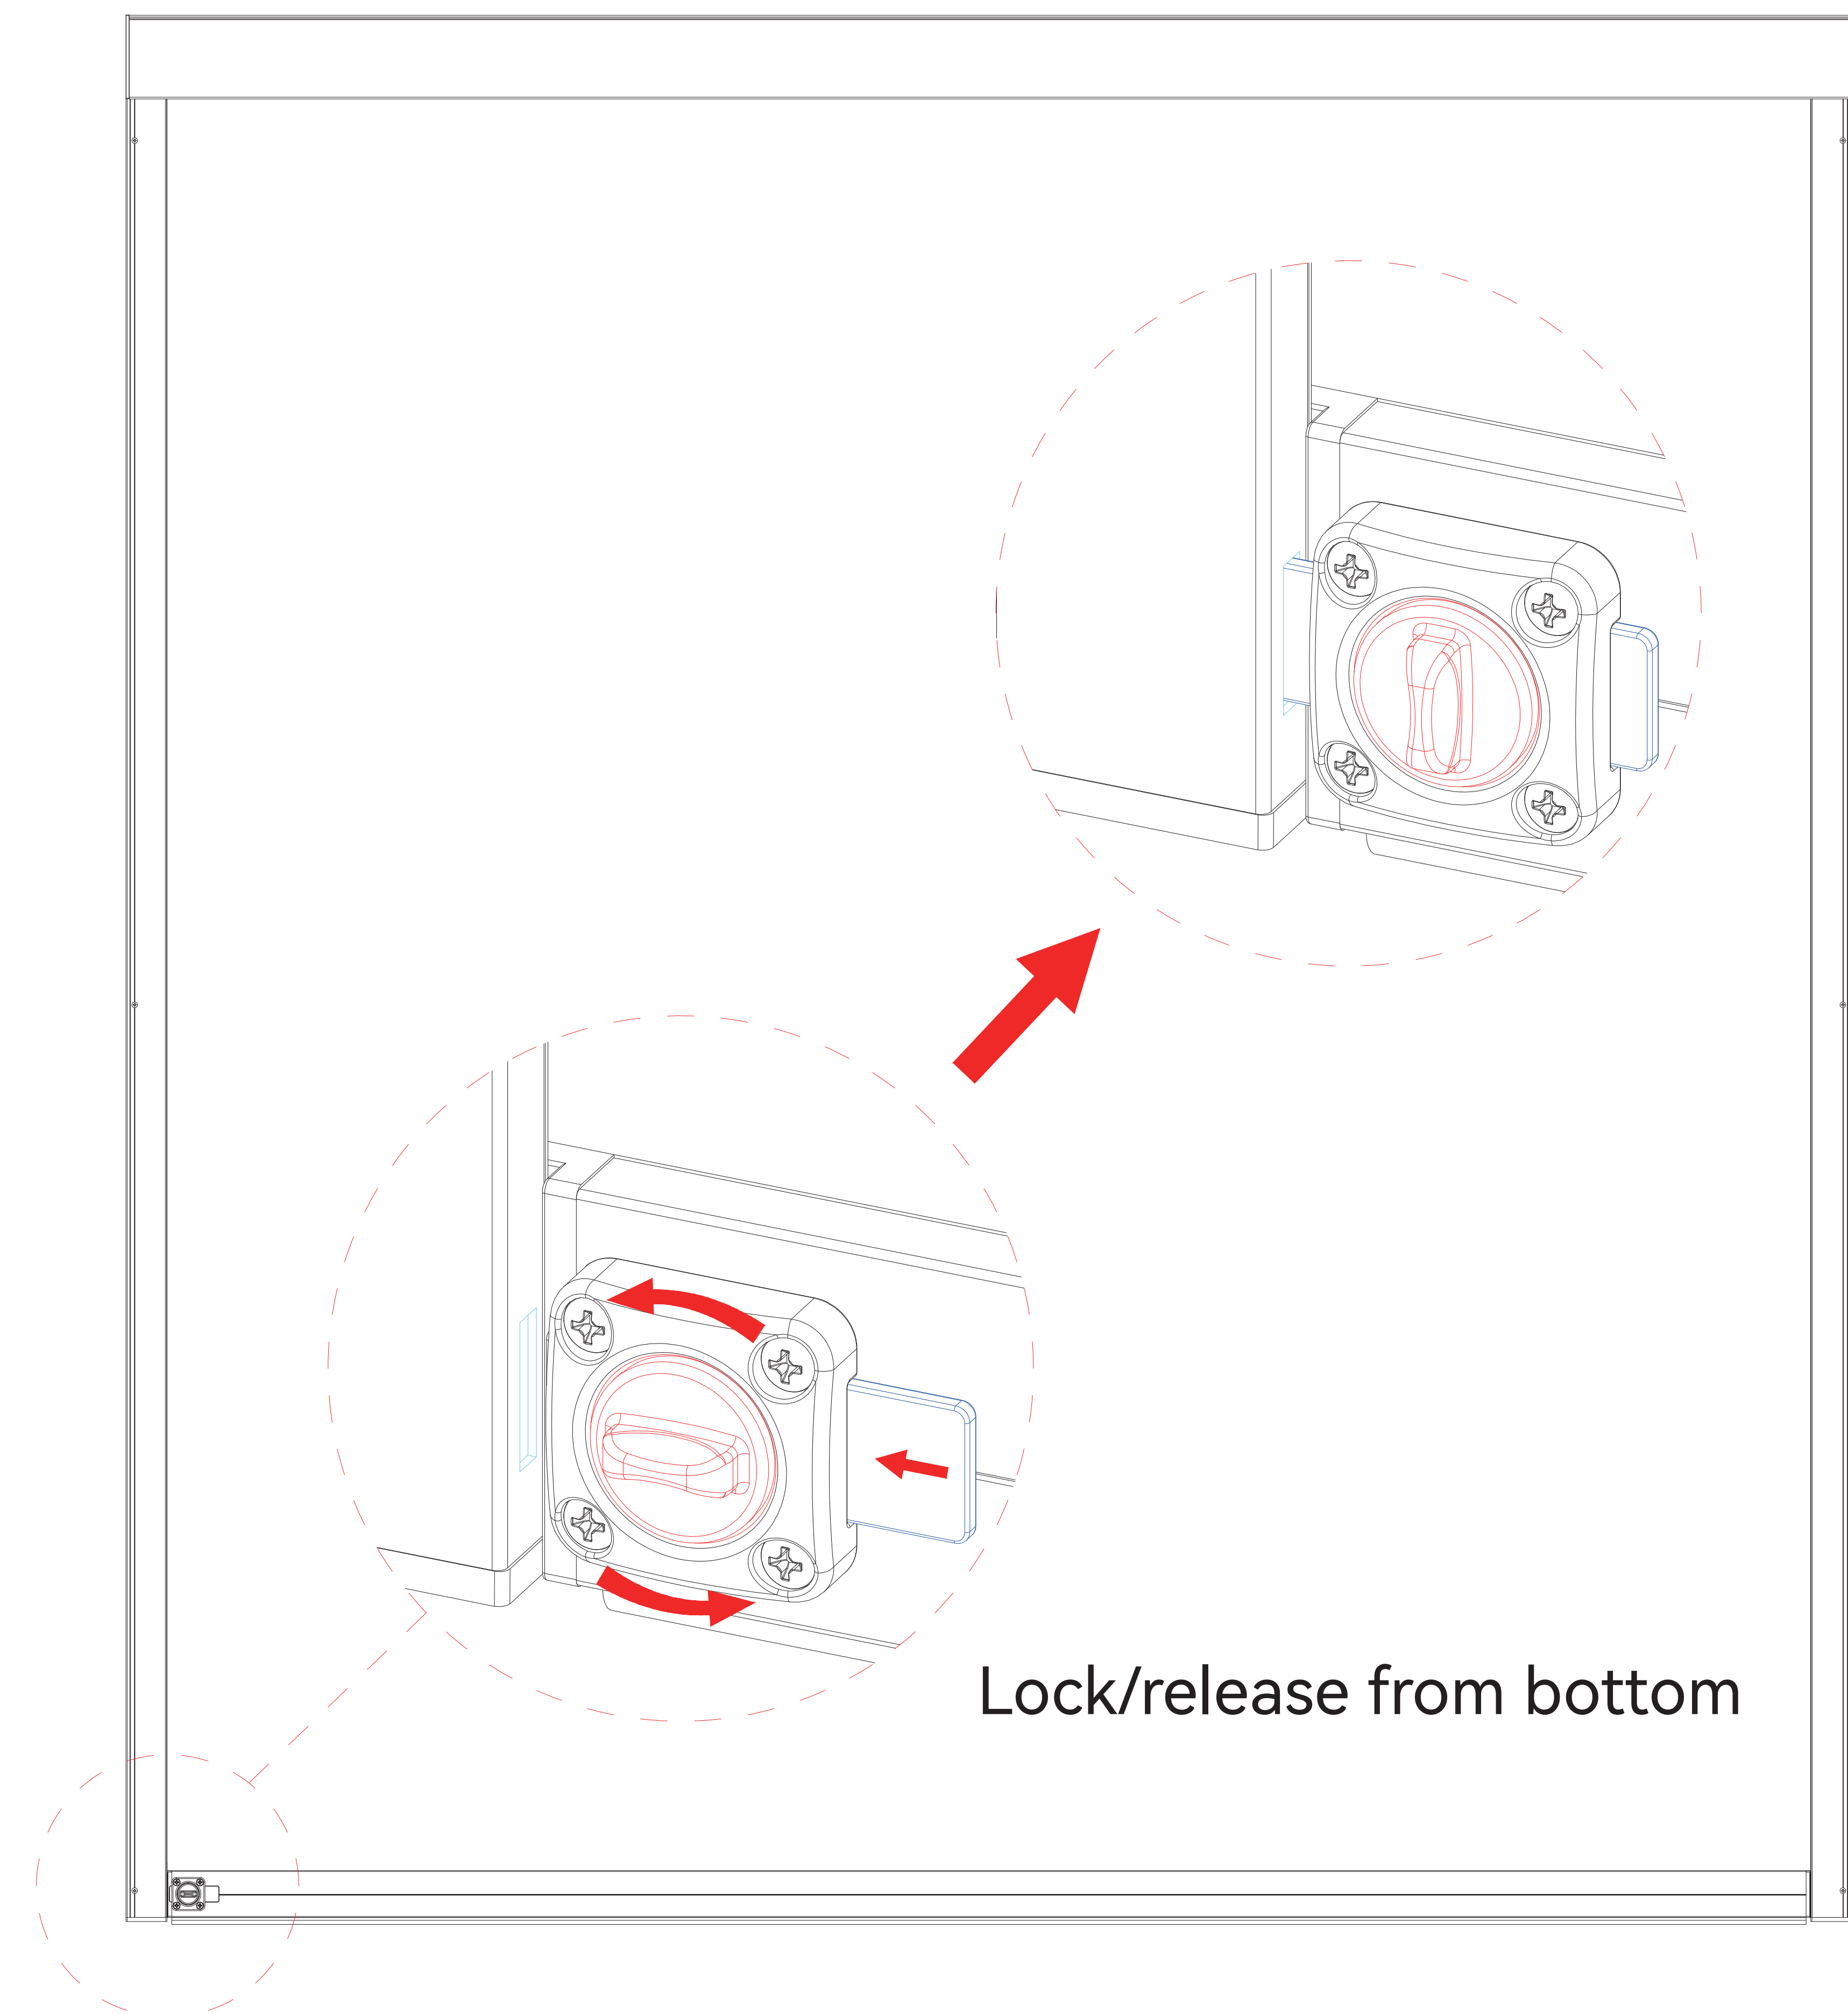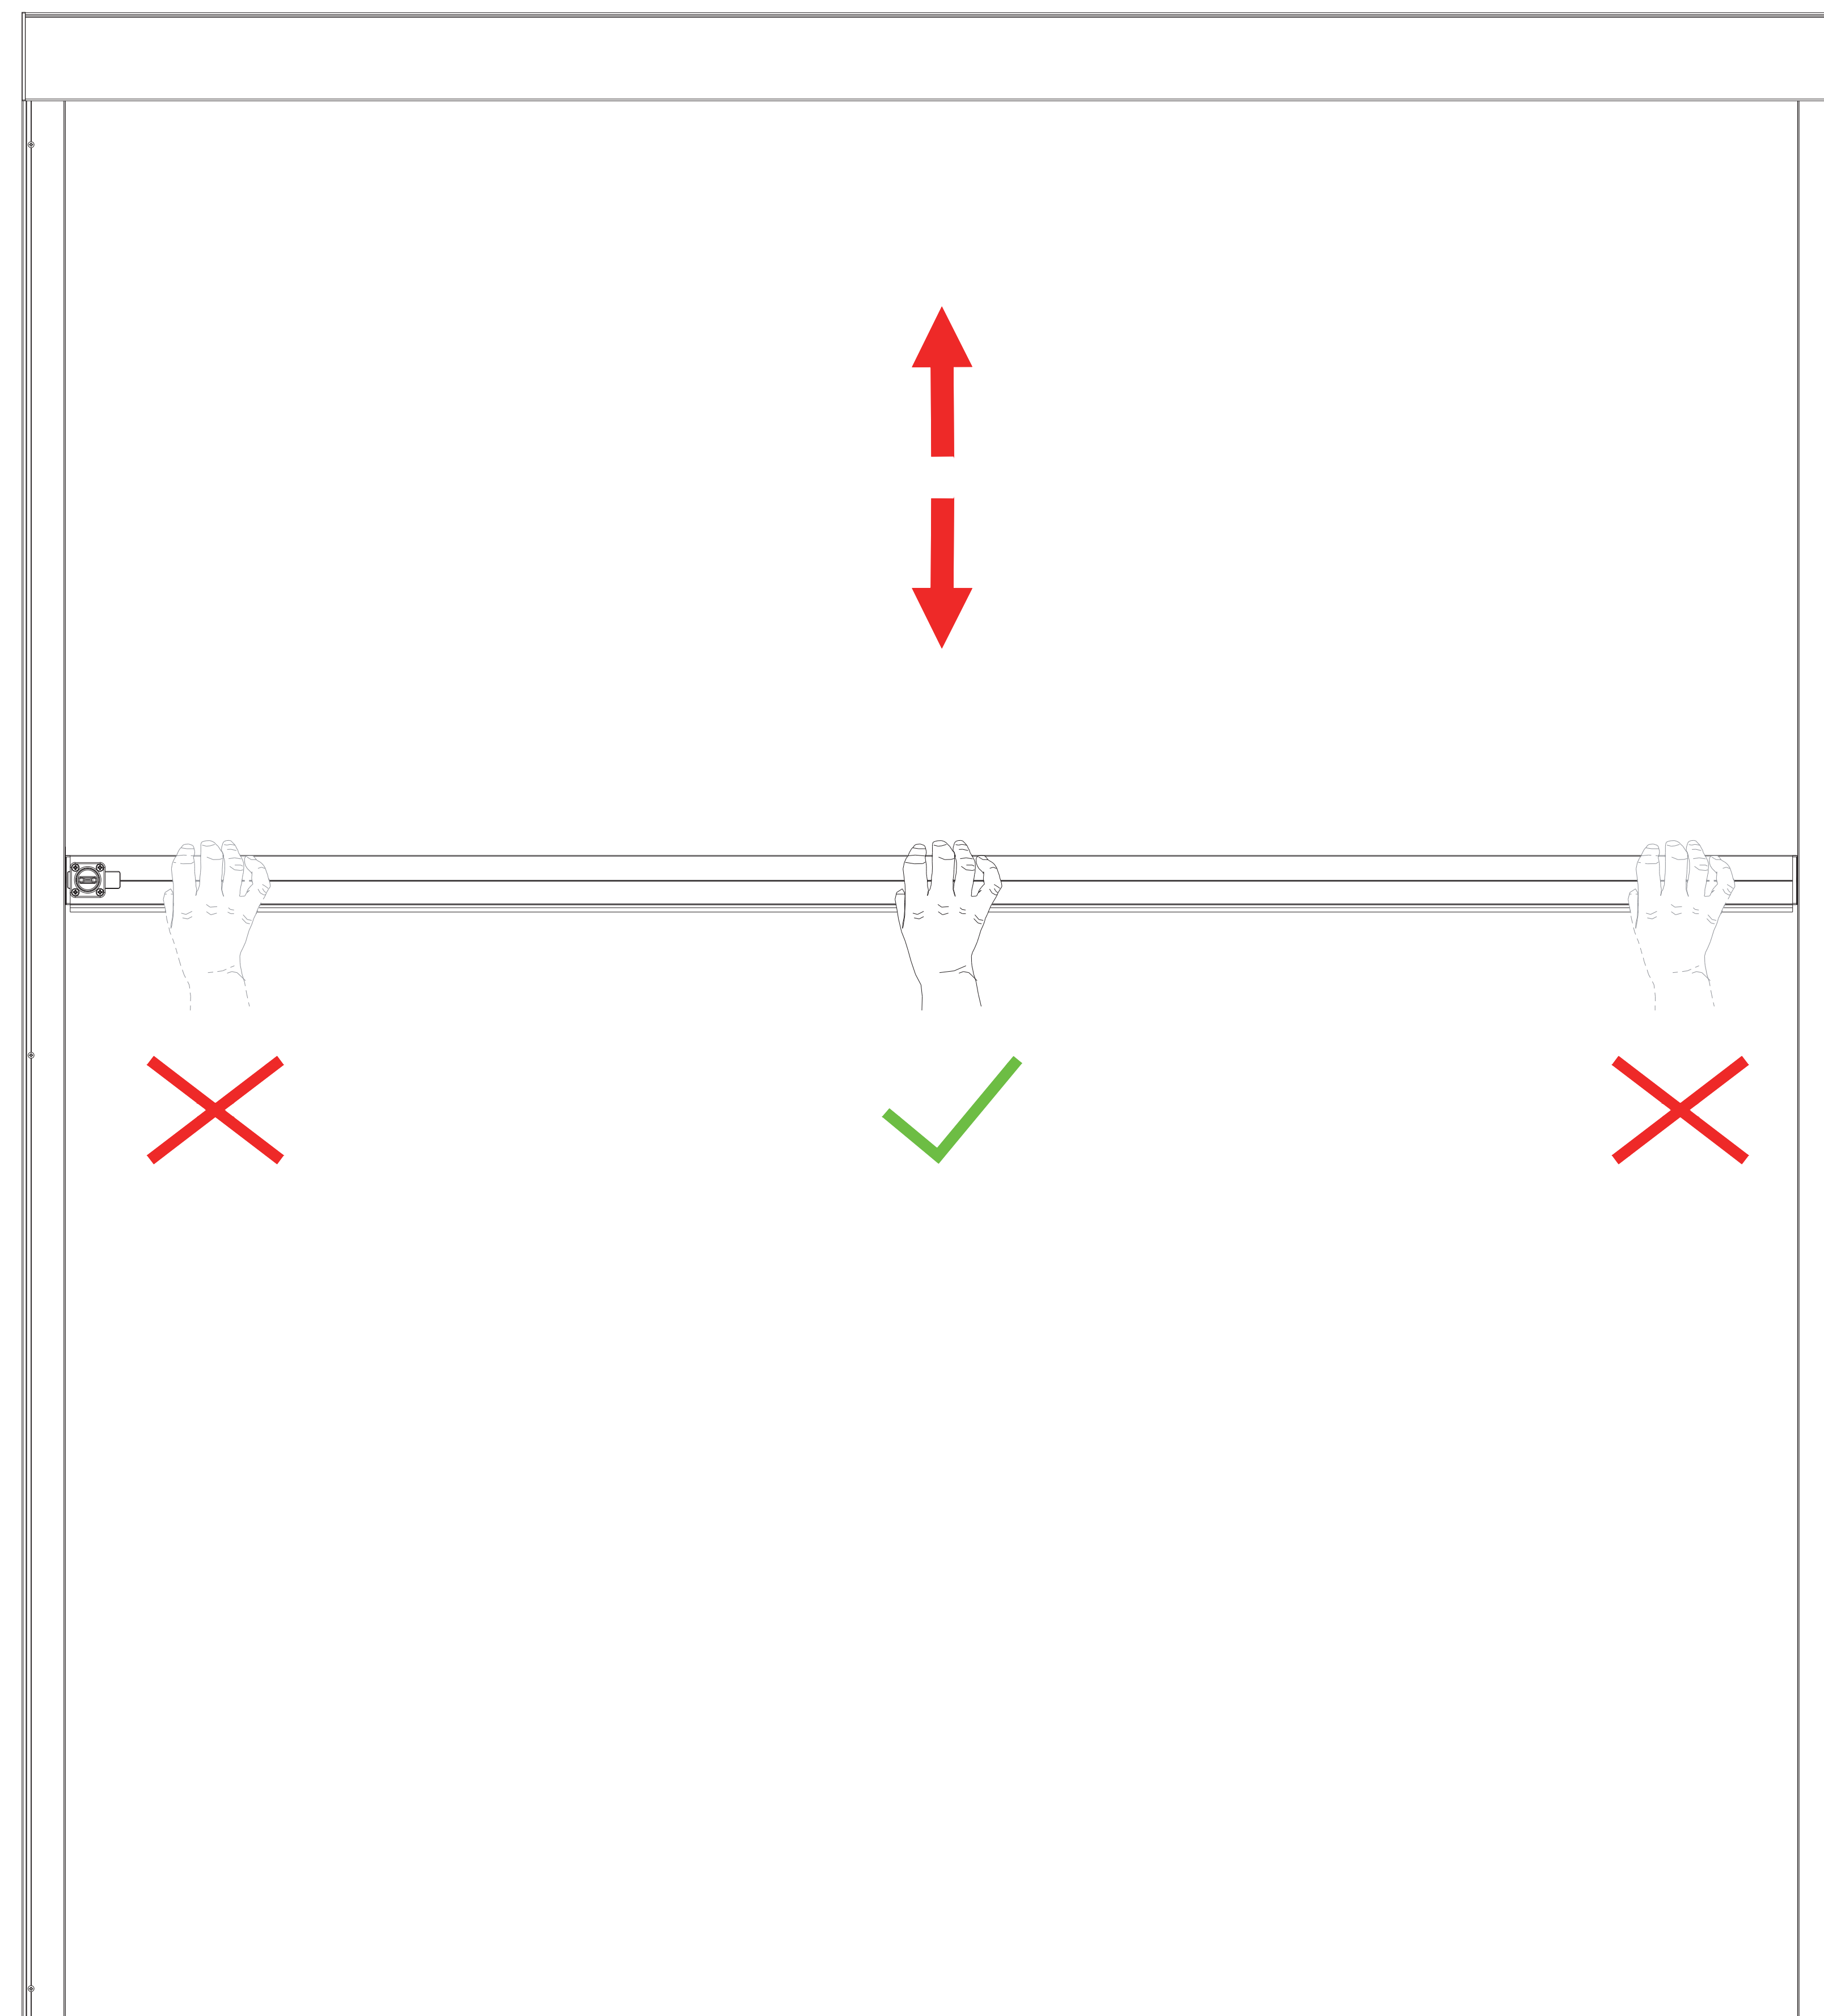




## Disassembly Reminder : (Only for disassembling the zip screen )

1. Remove the track cover plate by using the flathead screwdriver.

Scratch-resistant pad (user can use a piece of cardboard, fabric, or similar material to make a small pad to prevent scratching the profile during prying).

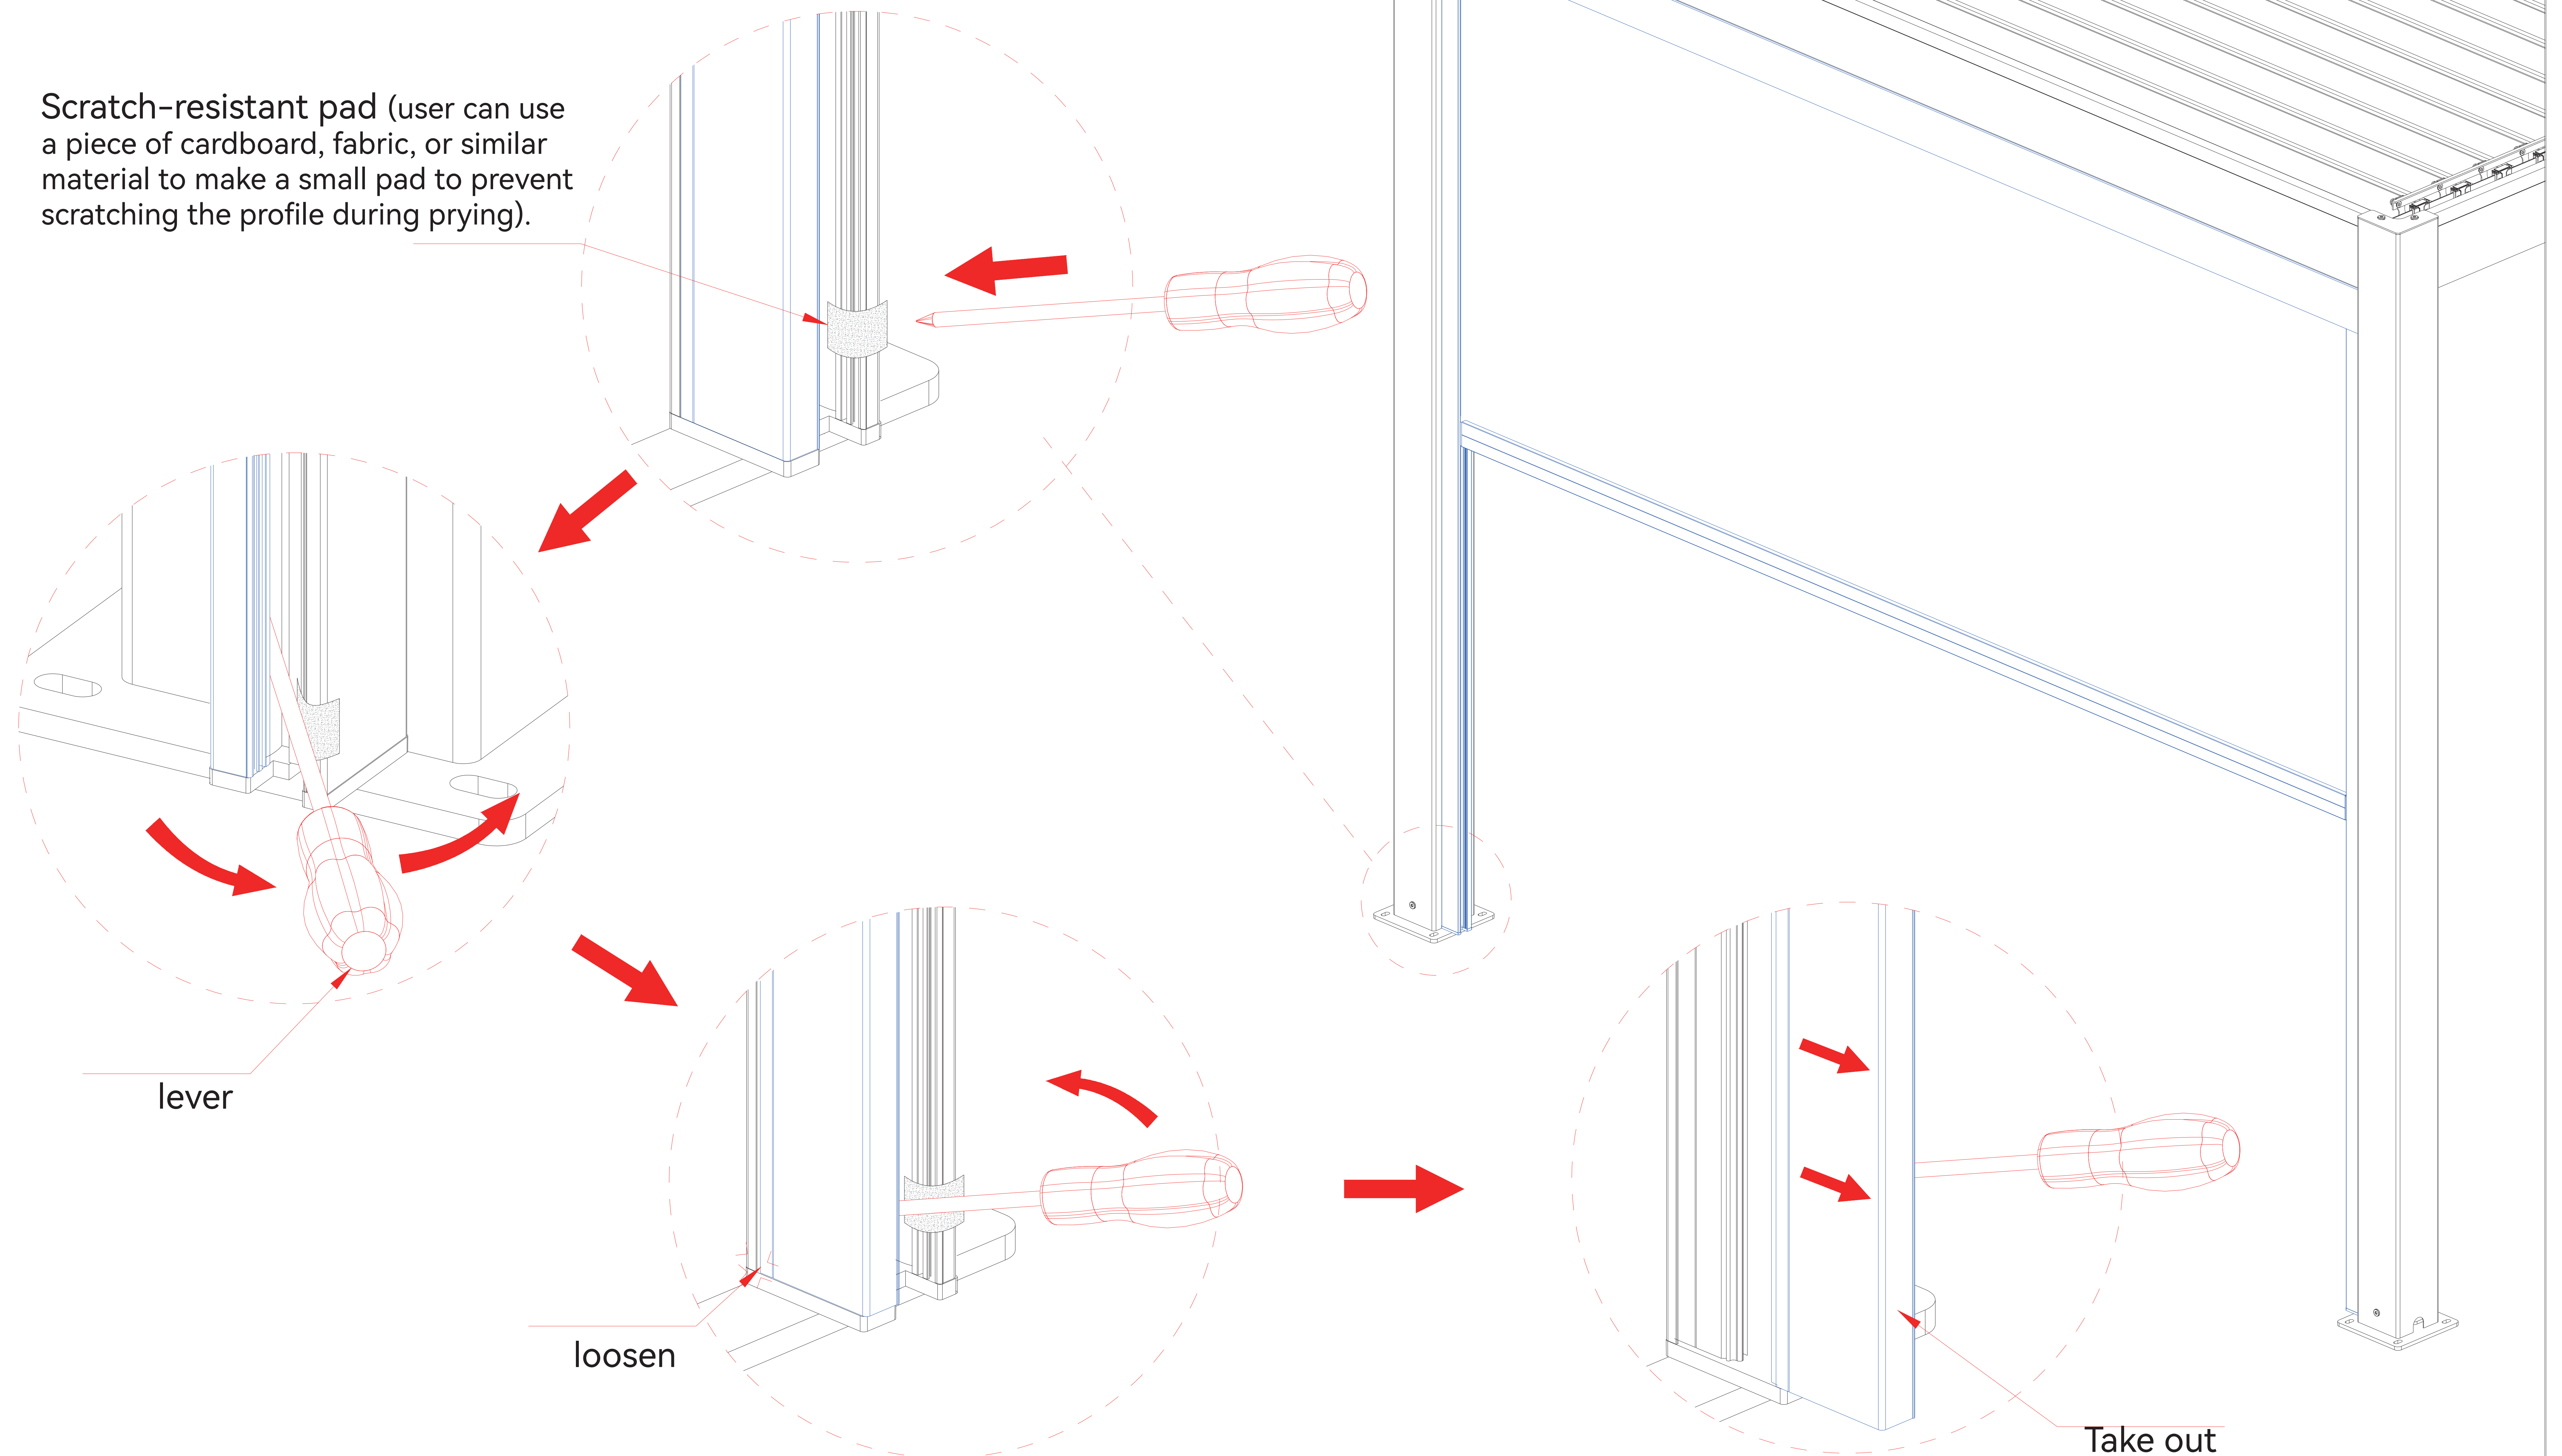



# Manual Zipper Blind

